


Fitting Instructions #3560IS

Nissan Pulsar N16

Steering Rack & Pinion Mount Bushing

Right Hand Drive Shown

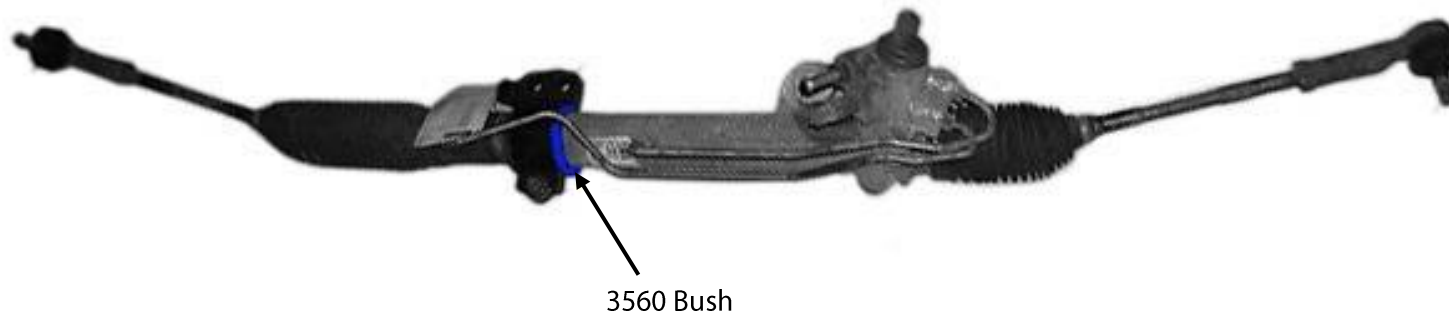

- This Kit can be installed without removing the Steering Rack from the vehicle, for best results it is recommended that the Steering Rack be removed to aid installation. Refer to manufacturer's manual on how to remove steering rack from the vehicle.
- Remove the steering rack and cross member mount bolts, then disconnect ball joints.
- If necessary, lower down the steering rack from the vehicle until you have enough space to work with and support on an adjustable tall jack stand.
- On the passenger side, remove mounting bracket and then remove factory bushes. Please note the split position of the factory bushes on the steering rack before removing.
- Clean housing areas to remove any old original bushing materials.
- Install the new polyurethane bushings into the housing mounts making sure that the split position of the polyurethane bushes lines up to where the factory bushes were previously.
- Note: Prior to installation, apply grease to the outside of the new bushes and housing mounts.
- Refit steering rack mounting bracket and cross member ensuring all mounting bolts and nuts are tighten up to the manufactures torque specifications.
- Wheel-align vehicle to ensure correct alignment.