

## Fitting Instructions #4015IS


### Mitsubishi Colt RG (Second Generation)

#### Shock Absorber Upper Bushing (Rear)

---

**Note:** Polyurethane bushes must be fitted to both sides of the vehicle.

- The rear shock absorber can be removed without having the car jacked up;
- Undo the fasteners on the rear shock absorber and then, remove the rear shock absorber from the vehicle;
- Remove the O.E bushes, clean all mating surfaces and housing areas to remove any old original bushing materials.
- Install the new polyurethane bushes with reference to the figure below;
- Apply the grease supplied to all mating surfaces and then install bush no. 4015L into the housing on the shock absorber. Press in the supplied crush tube into the bore of 4015L and then, refit the rear shock absorber to the vehicle. Loosely fit the lower shock bolt. Then, install the upper mount bush (part no. 4015U) and torque locking nut to manufacturer's specification;
- Proceed to torque lower shock bolt to manufacturer's specification.

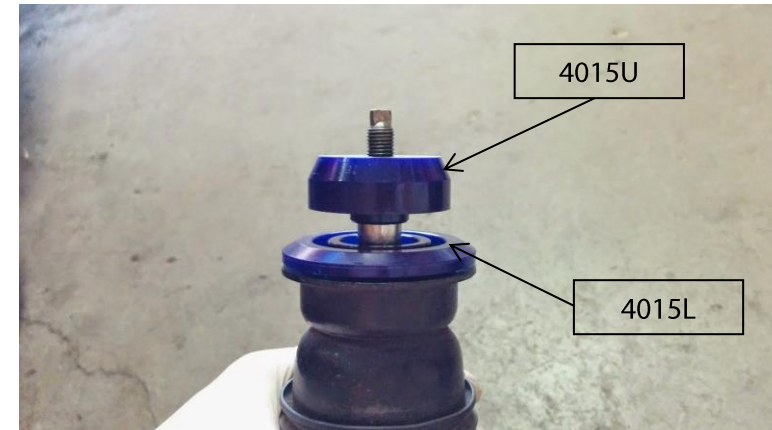

As viewed from the top of the rear shock absorber after fitment