

Fitting Instructions #3229IS

Ford Falcon

Rear Trailing Arm Front Bushing (Blade Arm)



Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Remove rear seat disconnect ABS cables from LH and RH side;
- After disconnecting the ABS cables, jack the vehicle up and support on jack stands/hoist and remove the trailing arms;
- Remove original shell parts from the housing with the use of a hydraulic press and suitable pressing tools;
- Using the grease supplied, lubricate the housing and the outer diameter of the new bushes and push them into the trailing arm housing, recessed side of bush must face outside of vehicle to match up with shoulder on pin (see figure 2);
- Generously lubricate the outside of the aluminium pins and inside of the bushes, then push the pins into the bushes. Note the orientation of the pin, as shown in the Figure 02, the side with a shoulder (step) should be facing the outer side of the arm (towards the outside of the vehicle);
- Refit the trailing arms to the vehicle, tighten all bolts to manufacture's torque settings and reconnect ABS cables;
- Carry out wheel alignment.

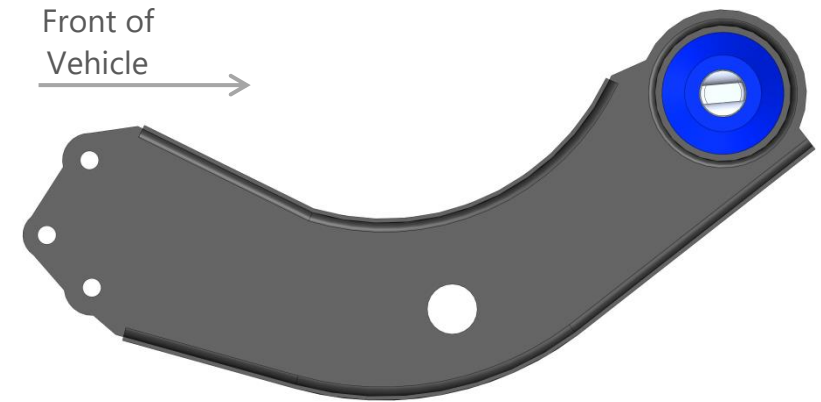


Figure 01 - LHS Trailing Arm – Side View (Inner Side)

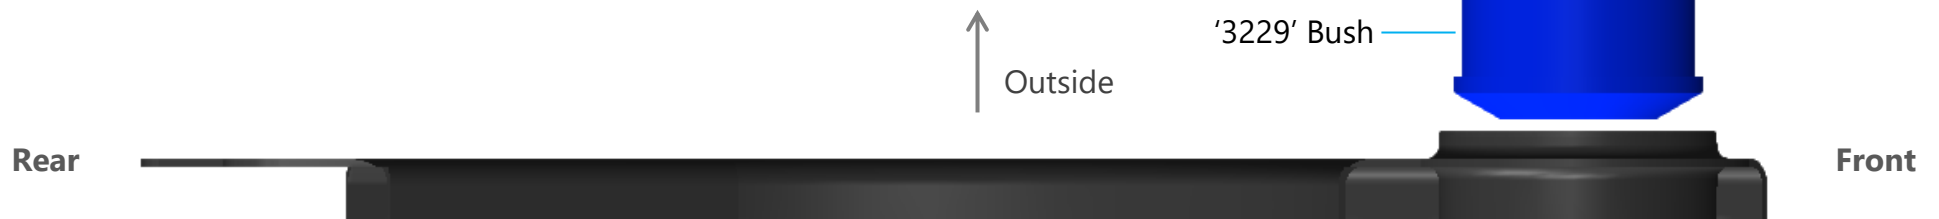


Figure 02 - LHS Trailing Arm – Top View