


# Fitting Instructions #0875IS

Ford Falcon

## Trailing Arm Lower Front Bushing



- With lower trailing arm removed from vehicle press original bushes out of the arm (Including steel outer shell part);
- \* Grease the leading face of the bush, the inside of the arm, and then press the polyurethane bush into place;
- \* Grease the inside of the polyurethane bush and the outside of the steel crush tube, then press the crush tube into the bush;

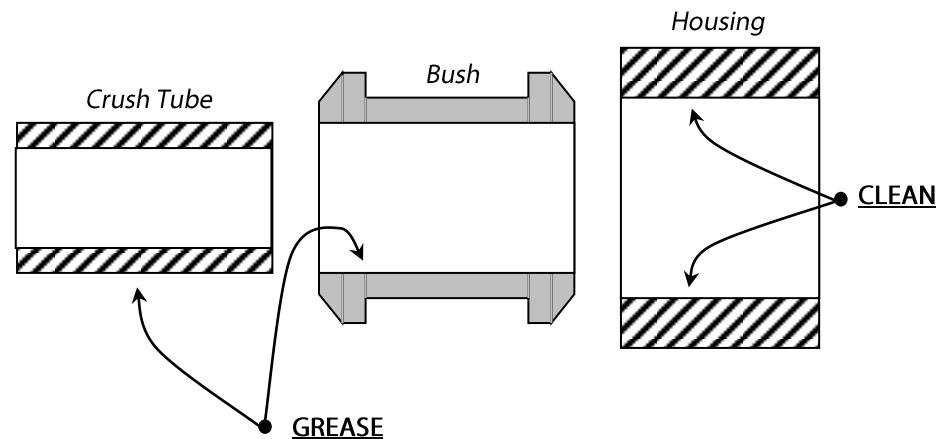

- Polyurethane washers in this kit provide positive location of the trailing arm into the chassis mounts. – Position washer onto mount pin (recess provided for welds) then slide trailing arm into place (Use special grease provided with kit).
- Grease each end of the bush and mating metal components.
- Note: All surfaces of bushing that contact metal should be greased.