


## Fitting Template #2308BIS

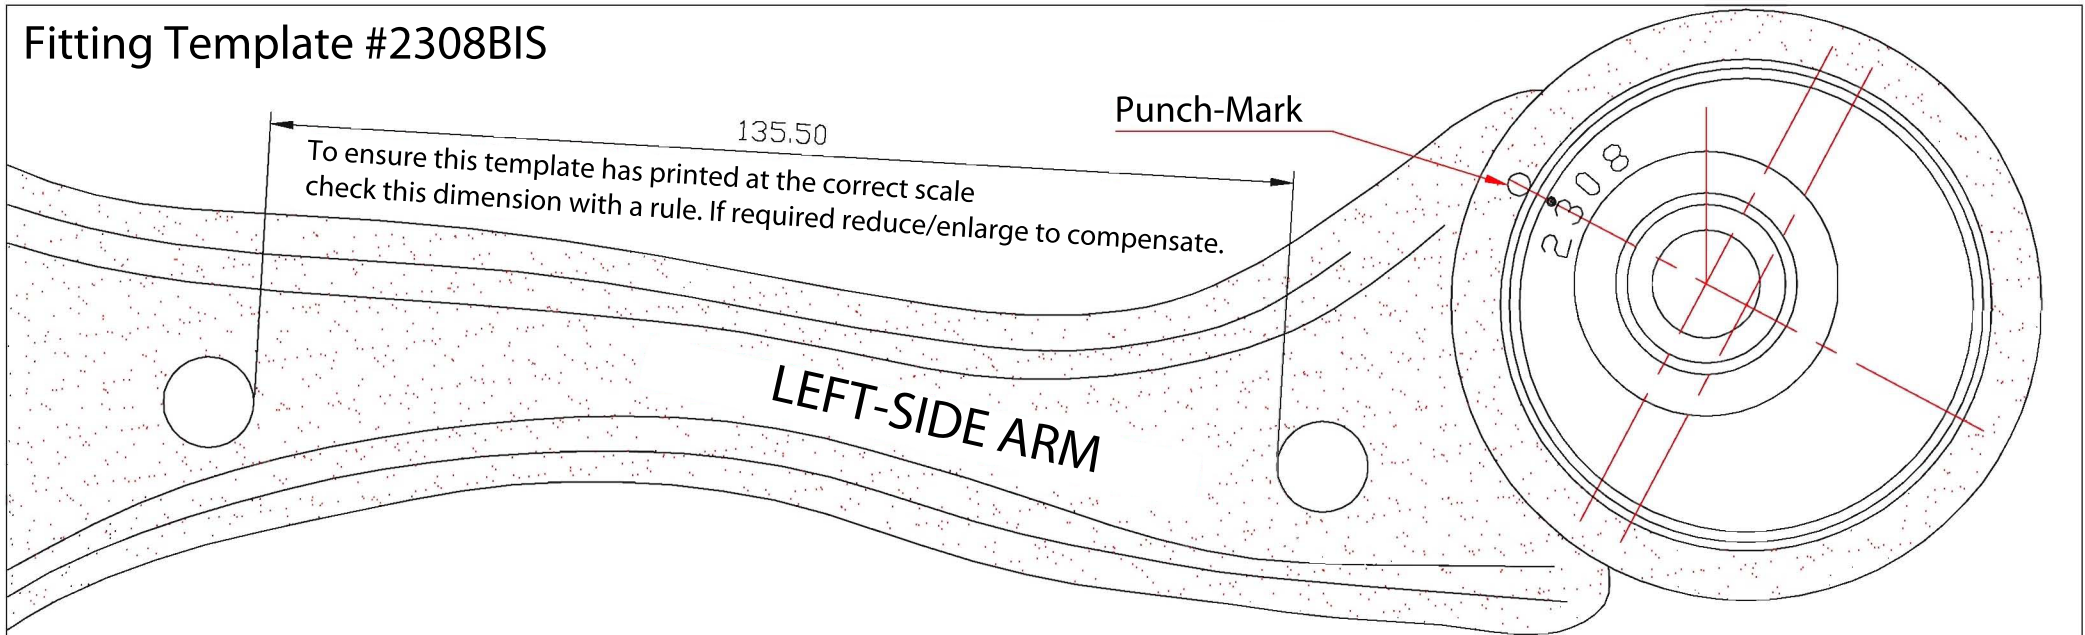

To assist in the correct alignment of this eccentric bush we recommend that this template be cut out and layed over the control arm. A centre punch can be used to mark the arm to indicate the direction of the offset. As the bush is pressed into the arm the dimple above the "3" in the part number should be aligned with the punch mark.

