


Fitting Instructions #3840IS

Hyundai Terracan

Rear Panhard Rod Bushing Kit

- With the vehicle on jack stands/hoist, remove the rear panhard rod;
- Remove the old original bushing from the housing;
- Use a wire brush and/or emery paper to clean the inside of the housing;
- Apply the supplied grease inside and outside of bushing;
- Install new bushing into the rod housing, see the illustration below;
- Grease the new steel crush tube and press it in the bush;
- Refit the rear panhard rod to the vehicle and tighten all bolts to the manufacturer's torque specifications.

SPF3842K - Rear Panhard Rod to Chassis Bushing

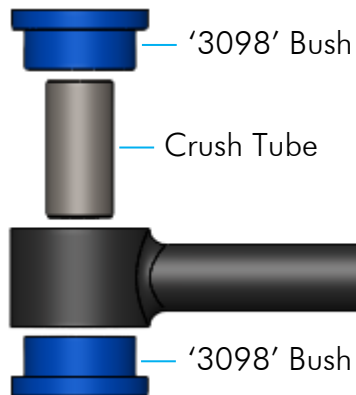

SPF3840K - Rear Panhard Rod to Differential Bushing

