


Fitting Instructions #3844IS

Hyundai Terracan

Control Arm Lower Rear Bushing

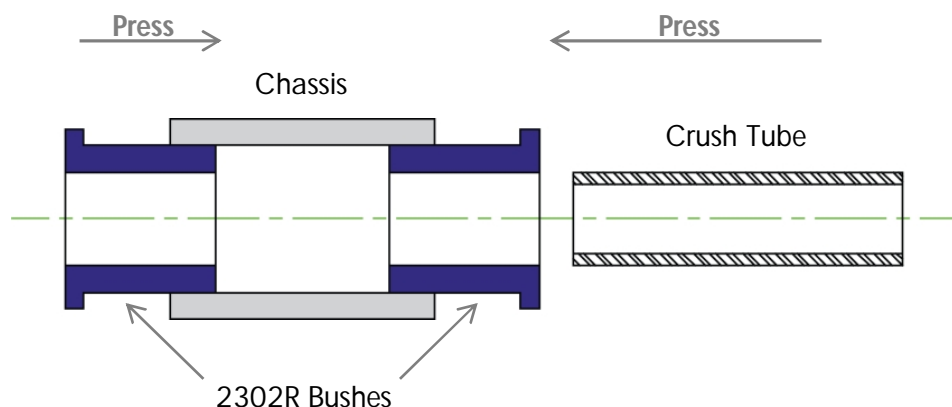


- With the vehicle on jack stands/hoist, remove the control arms;
- Use a hydraulic press to remove the OE bushes and the shell part from the arms, and replace them with the new bushes;
- Using the grease supplied, liberally apply it to the polyurethane bore of the bush, the outside of the steel crush tubes;
- Push the steel crush tubes into the bushes. A hand press may be required to insert the steel tube, as there can be significant crush, as it is shown in the picture;
- Refit the control arms to the vehicle, tighten all bolts to the manufacturers torque specifications;
- Re-assembly the rest of the car. Carry out a wheel alignment.

Note: Polyurethane bushings must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.

Fitting Instructions #3844IS

Hyundai Terracan

Control Arm Lower Rear Bushing

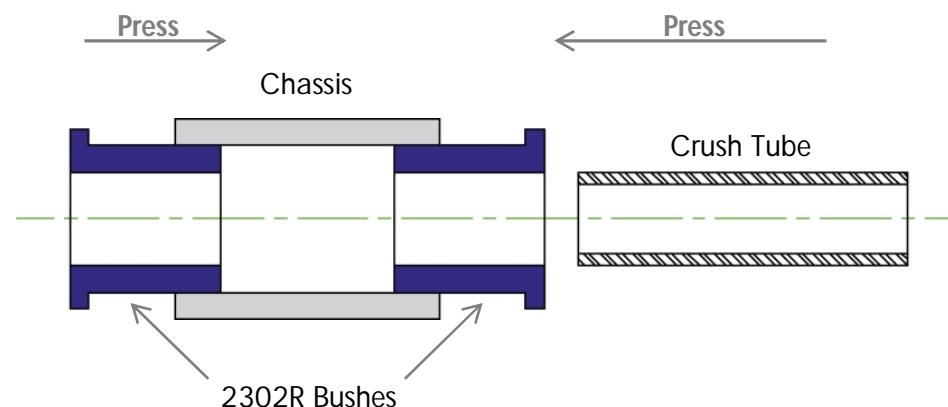

- With the vehicle on jack stands/hoist, remove the control arms;
- Use a hydraulic press to remove the OE bushes and the shell part from the arms, and replace them with the new bushes;
- Using the grease supplied, liberally apply it to the polyurethane bore of the bush, the outside of the steel crush tubes;
- Push the steel crush tubes into the bushes. A hand press may be required to insert the steel tube, as there can be significant crush, as it is shown in the picture;
- Refit the control arms to the vehicle, tighten all bolts to the manufacturers torque specifications;
- Re-assembly the rest of the car. Carry out a wheel alignment.

Note: Polyurethane bushings must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.