

# Fitting Instructions #RC0014FZIS

## Nissan GT-R R35

### Front Sway Bar Stabiliser Kit

Fitting of this bar should be carried out by qualified persons only.

- Jack the vehicle up and place on support stands;
- The protection cover on the front suspension under the car is divided in 3 parts. Remove the cover number 2 as shown in the Figure 01;

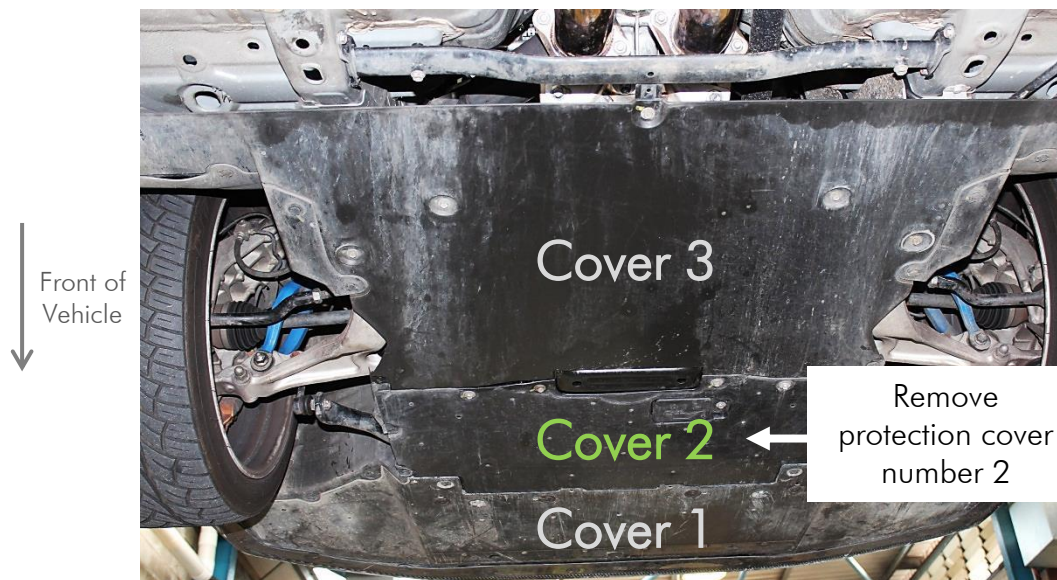


Figure 01 – Protection covers

- Remove the sway bar link, then unbolt and remove the sway bar bushing brackets, see Figure 02 and Figure 03;

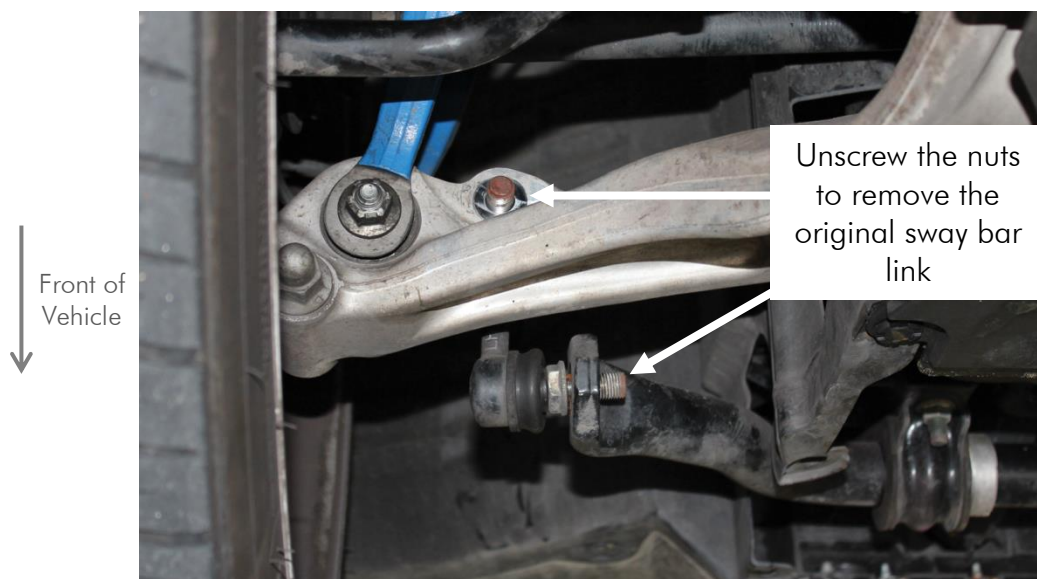


Figure 02 – Left hand side control arm and link



Figure 03 – Left hand side control arm, link and bracket

- o Lubricate the new SuperPro bushing with the grease supplied and fit it to the new RC0014FZ sway bar, then, using the original bracket, install the sway bar to the vehicle, as shown in the Figure 04 and Figure 05;



Figure 04 – Original bracket, new bushes and sway bar

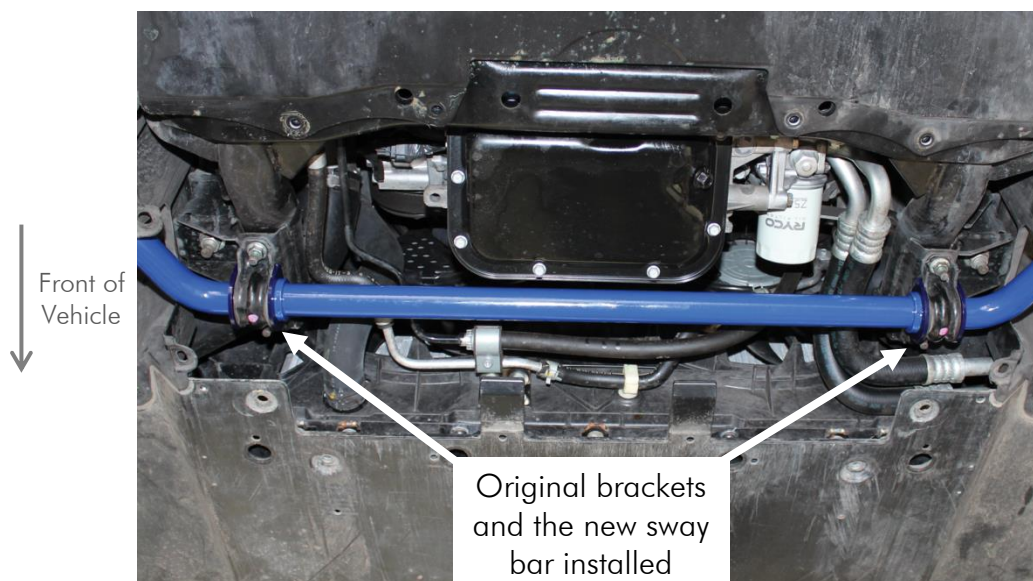


Figure 04 – Original bracket, new bushes and sway bar installed

- Pre-adjust the length of the links by comparing to the original, Figure 06;



Figure 06 – Link Length pre-adjustment

- Install the links on the sway bar by selection the desired settings, see Figure 07;



Figure 07 – Sway bar settings.

- Install the links, as shown in the Figure 08;

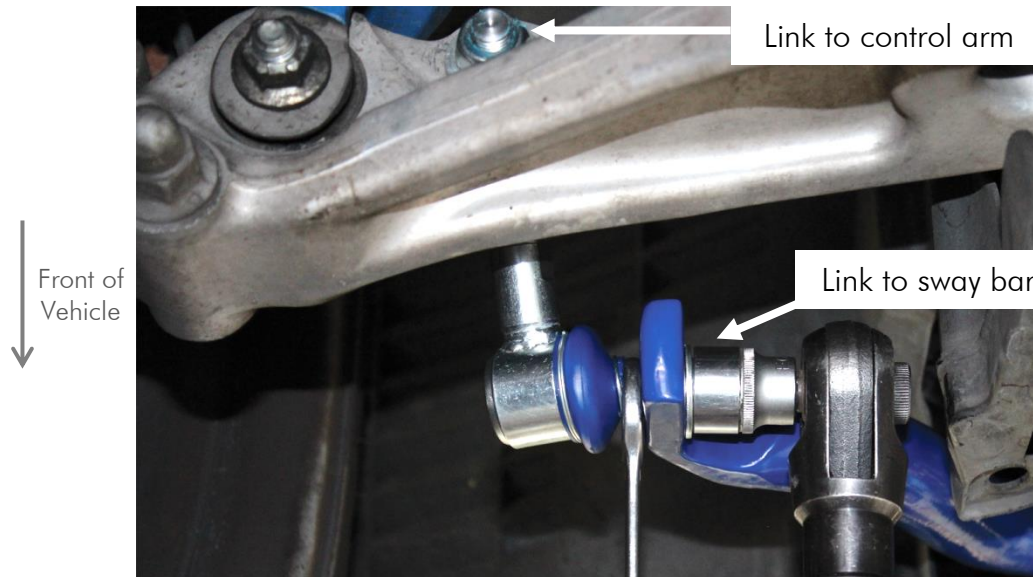


Figure 08 – Installing sway bar link on the left hand side

- Check and, if necessary, adjust the sway bar links again, and tighten the nut to lock the desired length, Figure 09;



Figure 09 – Installing sway bar link on the left hand side

- Install the protection covers back.