


## Fitting Instructions #3495IS

Honda Civic EC, ED, EE, EG, EH, EJ, EK

### Trailing Arm Lower Rear Bushing

- With the vehicle on jack stands/hoist, remove the control arms;
- Use a hydraulic press to remove the OE bushes and the shell part from the arms;
- Fit the new bushes, pushing until it is on the same level as the arm, as it is shown on the illustration;
- Using the grease supplied, liberally apply it to the polyurethane bore of the bush, the outside of the steel pin;
- Push the steel pin into the bushes. A hand press may be required to insert the steel pin, as there can be significant crush;
- Refit the control arms to the vehicle, tighten all bolts to the manufacturers torque specifications;
- Re-assembly the rest of the car. Carry out a wheel alignment.

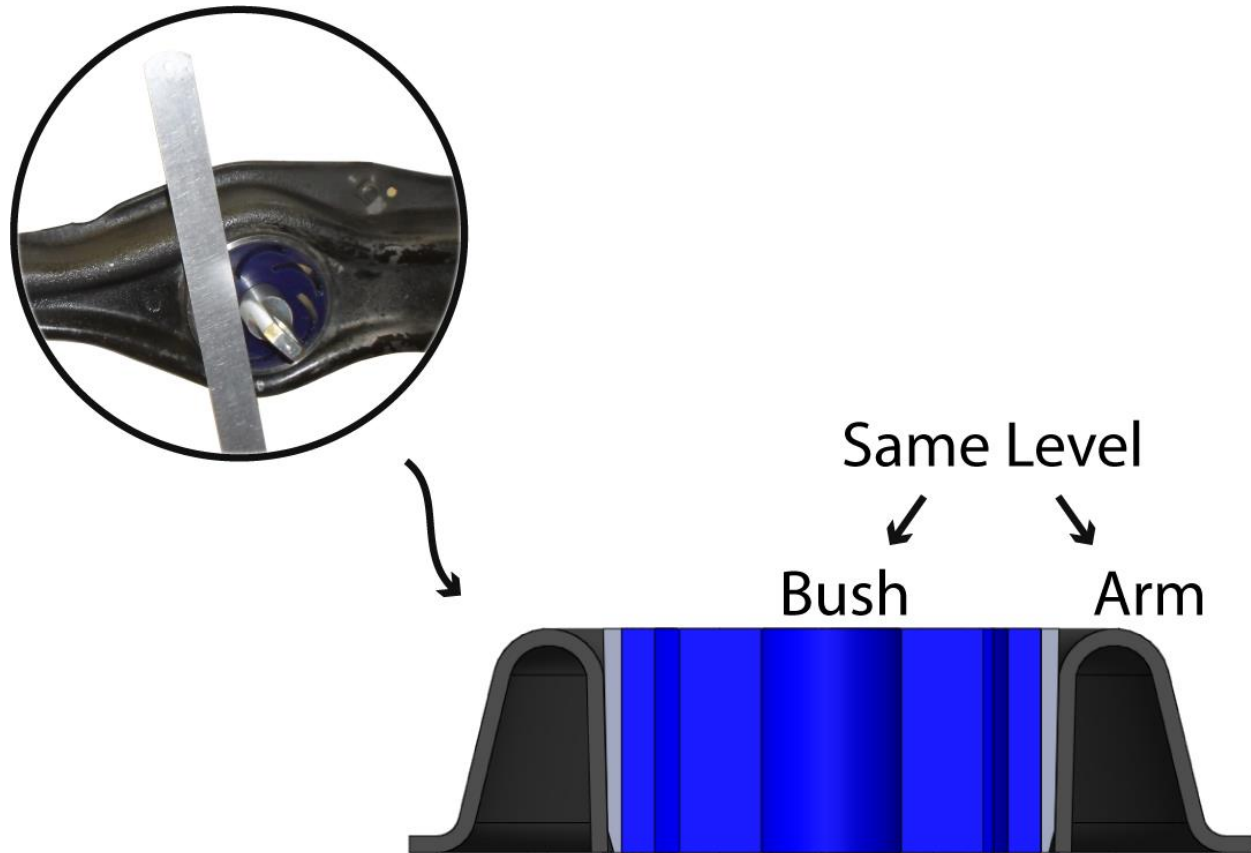

**Note:** Polyurethane bushings must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.