


Fitting Instructions #TRC1006IS

Subaru BRZ / Toyota 86

Support Brace

- With the vehicle on jack stands/hoist, remove the lower control arm inner and sway bar bracket bolts of the rear suspension highlighted on the picture.

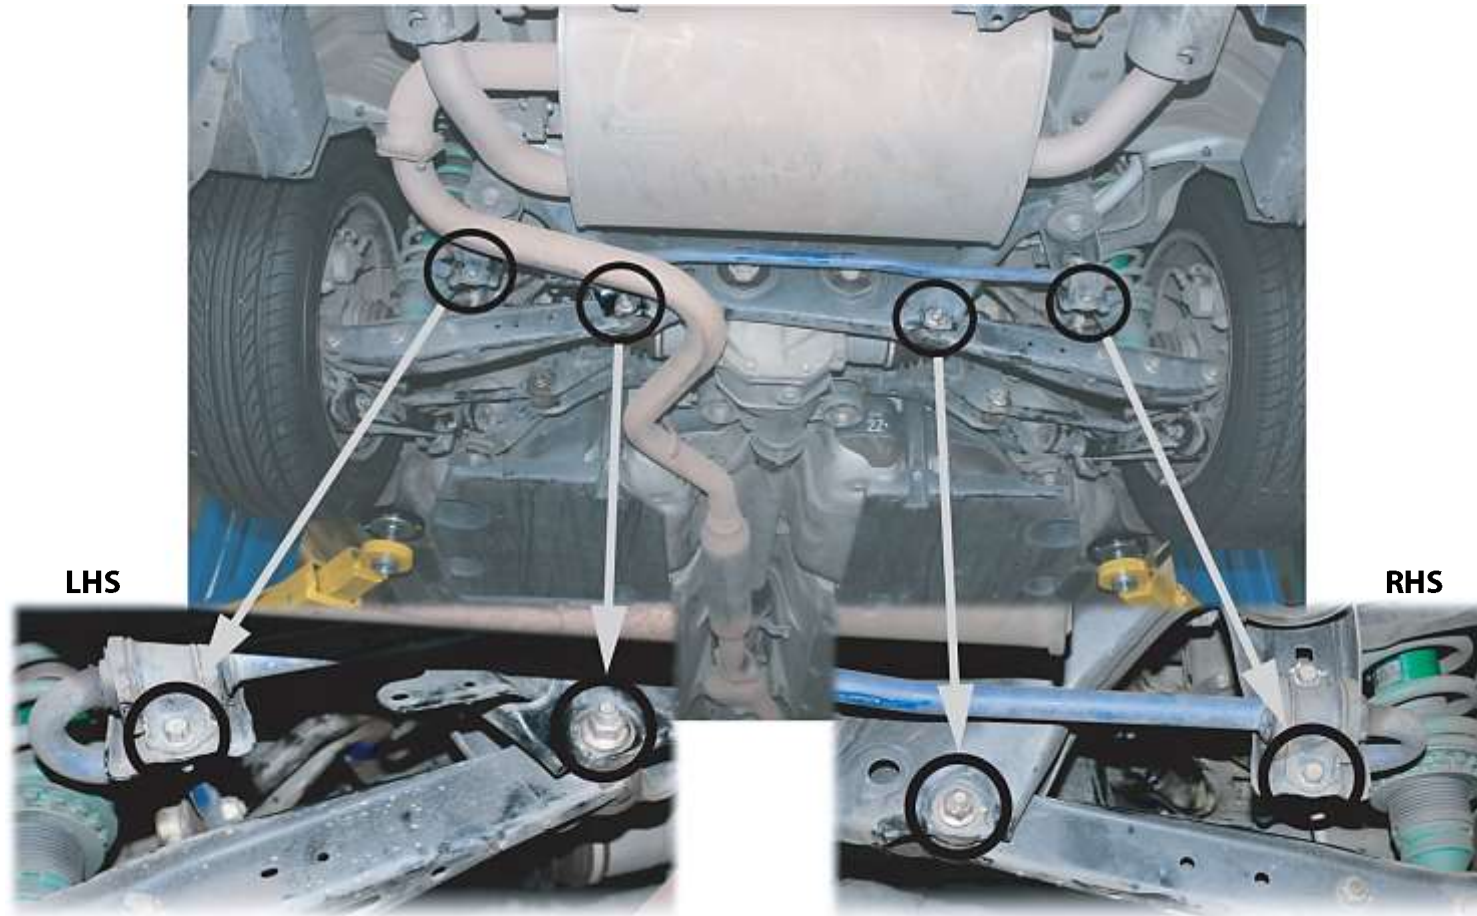

Fitting Instructions #TRC1006IS

- Install the TRC1006 brackets as it is shown on the picture.

LHS



RHS



- Note that the supplied **5mm washer** should be between the bracket and the sub-frame, as indicated on the picture.

Tighten all mounting bolts to manufactures specifications.