

Fitting Instructions #3511IS


TOYOTA YARIS NCP42 (10/2005-10/2011)

Front Lower Control Arm Front Bushing (To suit Right-hand drive vehicles)



For ease of installation and correct positioning of Polyurethane bushes:

- Remove rubber bush and clean all traces of rubber from the housing;
- Grease the inside of the bush housing. Grease the outside of the bush, and then press the bush into the housing with an arbour press;
- Grease the inside of the bush, grease the outside of the crush tube, then press tube into the bush;
- Grease each end of the bush and mating metal components.

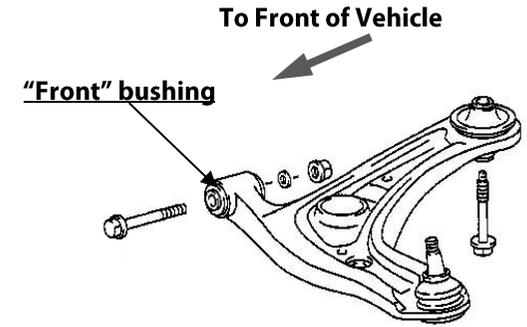

Left Hand Side Shown

Note: All surfaces of bushing that contact metal should be greased.

