

Fitting Instructions #4669IS

Mitsubishi Pajero

Rear Control Arm Lower Inner Bushing

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- Jack the vehicle up and support on jack stands/hoist;
- Remove the rear lower control arms;
- Remove original bushes from the housing with the use of a hydraulic press and suitable pressing tools;
- Set the '4669' shell bush with the offset towards the inner side of the arm, as shown in the figure. Push the new shell bushing into the housing as shown in the illustration;
- Apply the white grease supplied into the bore of the bush, and the outside of the crush tube;
- Press the tube into the bush, then put the washers either side of the bush as shown in Figure 02;
- Refit the control arm to the vehicle and tighten all bolts to manufacture's torque settings.
- Carry out wheel alignment.

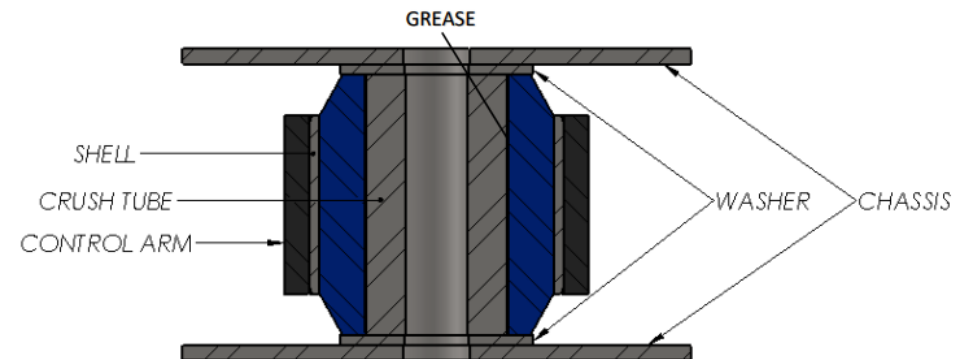
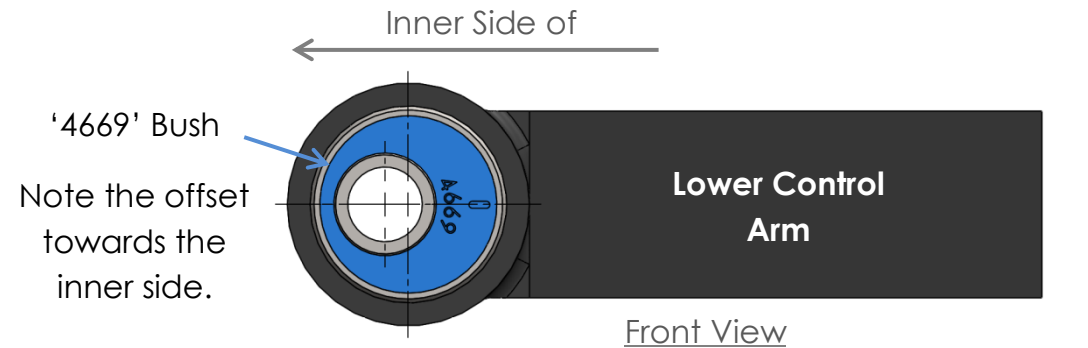


Figure 02. Bush Assembly Diagram.