


Fitting Instructions #4678IS

Ford Falcon BA (V8/Turbo Engine)

Rear Differential Front Bushing

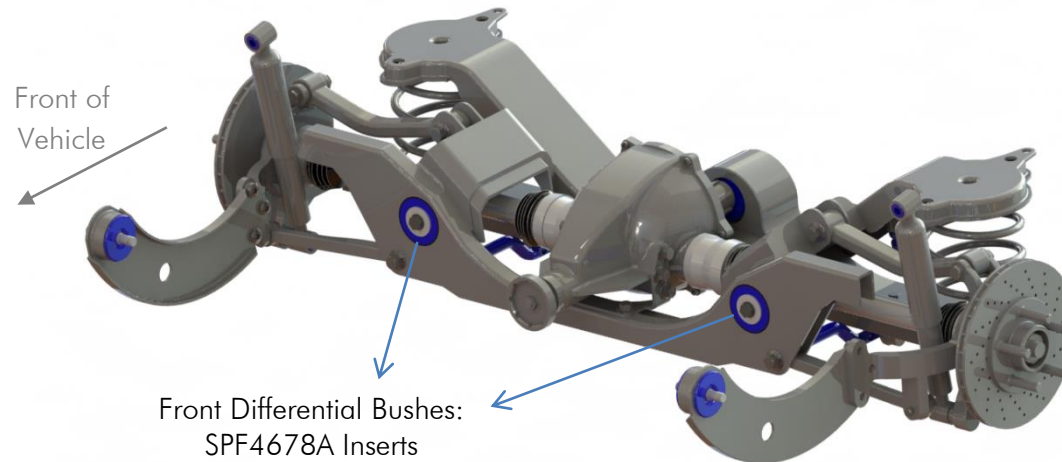

- Set the car up on a hoist and lower the sub-frame just enough to have some clearance to remove the differential bush bolt;
- Remove the original bolts from the front differential bushes;
- Install the inserts, washers and reinstall the original bolts as shown in the pictures;
- Reinstall the sub-frame to the car and tighten all the bolts and nuts to the manufacture's recommended torque settings.

