


Fitting Instructions #TRC0045IS

- Holden Colorado RG 11/2011-on

- Isuzu D-max 05/12-on

Handbrake - Relocation

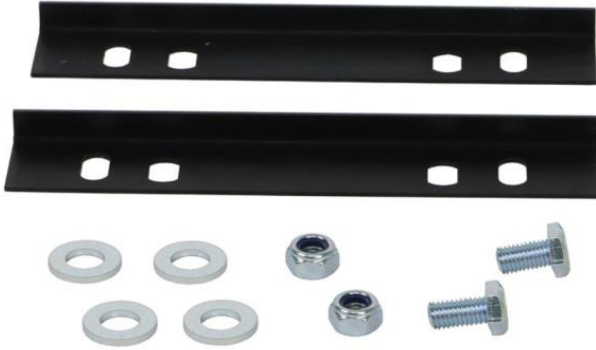

Contents - 2x extension brackets

- 2x M8x1.25x15mm bolts

- 2x M8x1.25 nyloc nuts

- 4x flat washers

This product is for raised vehicles only

- Raise vehicle evenly and safely support.

Never rely on a Jack only

Note - you may be able to access bracket while car is on the ground.

- Un-bolt hand-brake cable from underneath leaf spring (cable is bolted to leaf spring)
- Bolt up new bracket to leaf spring with original bolts.
- Bolt up hand-brake cable OE bracket to new bracket with supplied hardware.

Note - new bracket will run in-line with leaf spring - pointing to front of car

- Re-check bolts after 100kms

