



Fitting Instructions #0987IS

Holden Commodore
Sway Bar Link Rod Kit



Note:

- The original locating washer fitted to the Strut Leg is not required during assembly;
- The washers are to be fitted with the concave away from the poly bushes, as shown.

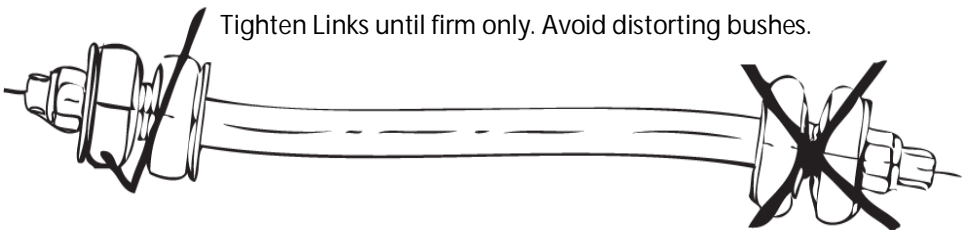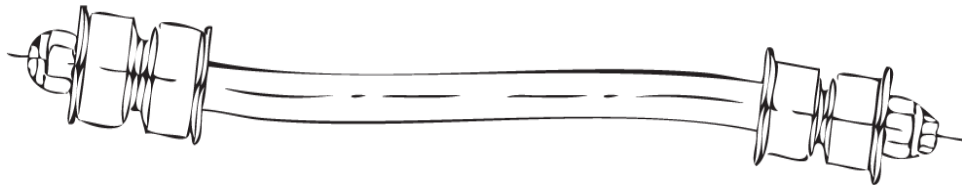

Fitting Instructions #0987IS

Holden Commodore
Sway Bar Link Rod Kit



Note:

- The original locating washer fitted to the Strut Leg is not required during assembly;
- The washers are to be fitted with the concave away from the poly bushes, as shown.

