


Fitting Instructions #3221IS

Ford Falcon FG

Front Strut Bar to Sub Frame Bushing

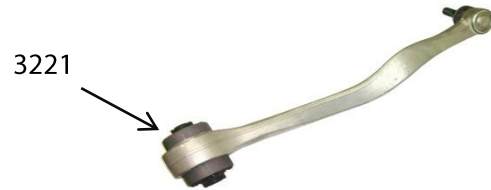

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- With the vehicle on jack stands/hoist, remove the wheels and remove the strut bars making sure not to damage wheel speed sensors/brake cables;
- Use a hydraulic press to remove the O.E. bush;
- Use a pen or similar to mark 19.5mm from the base of the metal shell on the new bush. Press in the new bush to gain the desired result (each offset bush will give approx 0.75 degree castor change) and make sure an even amount of shell is protruding both sides;
- Using the grease supplied lubricate the bore of the bush and the outside of the crush tube, then push the crush tube into the bush;
- Refit the strut bar to the vehicle, tighten all bolts using manufactures torque settings and carry out a wheel alignment.

