


Fitting Instructions #1414IS

Ford Falcon

Idler Arm Assembly



- Remove the old unit from the vehicle;
- Using the grease supplied, smear grease on the polyurethane end of the arm only as per photo below;

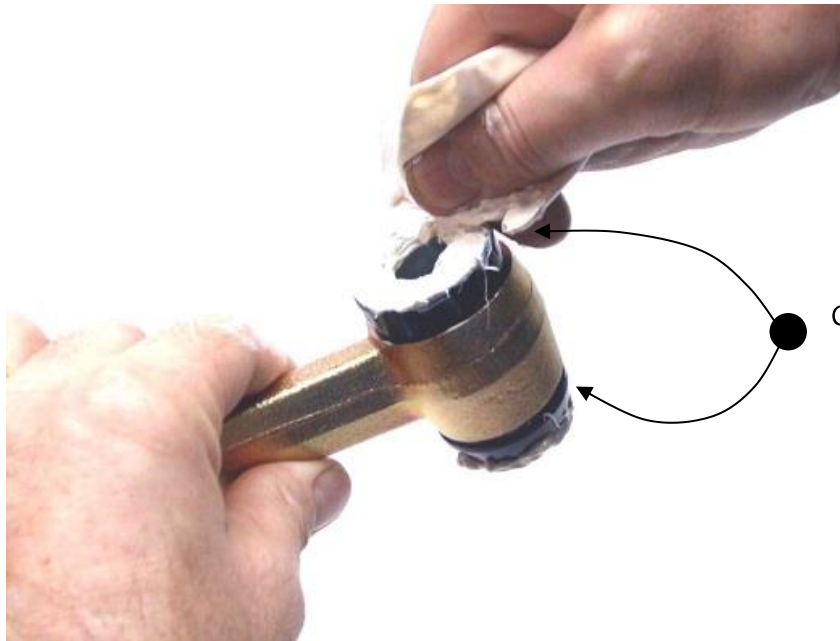

Grease on top and bottom of PU Bushing
end only before installation

- Smear grease on the vehicle-mounting pin and mount the new unit into the vehicle. Smear grease on the lower washer to ensure that all surfaces are lubricated;
- Ensure that the road wheels are in the straight-ahead position before tightening up all nuts to the manufacturer's specifications.