


Fitting Instructions #3745IS

VW Amarok

Rear Shackle Upper Bushing

Superpro
Suspension Parts

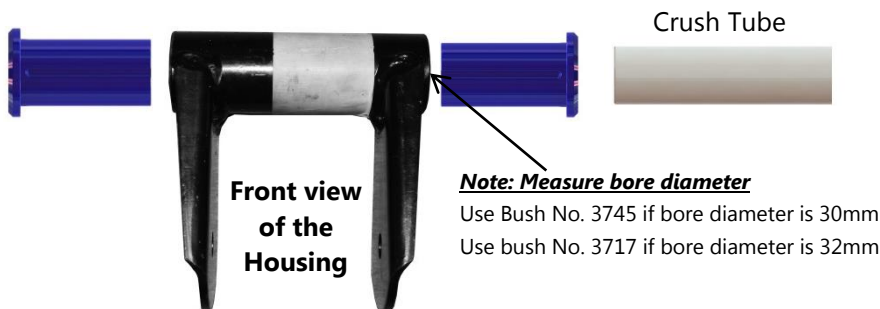

- Jack the vehicle up and support on stands/hoist;
- Remove the shackles of the rear suspension from the vehicle;
- Remove original bushes from the housings with the use of a hydraulic press and suitable pressing tools;
- Measure the inside diameter of the shackle –
 - Use SPF3745 bush if inside diameter is 30mm
 - Use SPF3717 bush if inside diameter is 32mm
- Clean the housing to remove old original bushing materials before installing new bushes. Then apply the grease supplied into the housing and on the outside surface of the bush, and push the new bushes in;
- Refit the rear shackle to the vehicle;
- Tighten all bolts ensuring that you use manufacturer's torque settings and carry out wheel alignment.