


Fitting Instructions #2747IS

Alfa Romeo 147 & 156

Front Swaybar to Chassis Bushes

Note: The front Swaybar brackets are riveted around the original bush, which is fitted on the sway bar.

- The fitment of this bush kit requires the removal of the riveted area for ease of assembly. Following the manufacturers instructions, remove the front Swaybar (anti-roll bar) from the vehicle;
- The original equipment brackets must be retained for use with the new polyurethane bushings. A 12mm drill can be used to carefully remove the peened area, which holds the two-piece bracket together. Be cautious, checking frequently so that only the minimum amount of metal is removed and the bracket can be dismantled. Do not drill through into the second half of the bracket as this shall render the bracket useless;

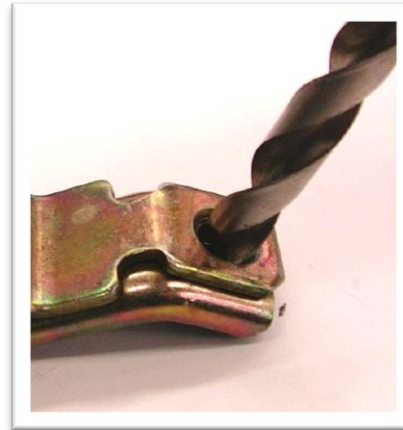

- With the riveted area removed, the two halves of the bracket can be gently pried apart, enabling the original rubber bushes to be removed;



- Lubricate the bore of the new bushes with the grease supplied and refit to the Swaybar. The brackets can then be assembled around the bushes and the completed assembly can be refitted to the vehicle.