


Fitting Instructions #3843IS

Hyundai Terracan (2001- 2007)

Control Arm Upper Inner Bushing

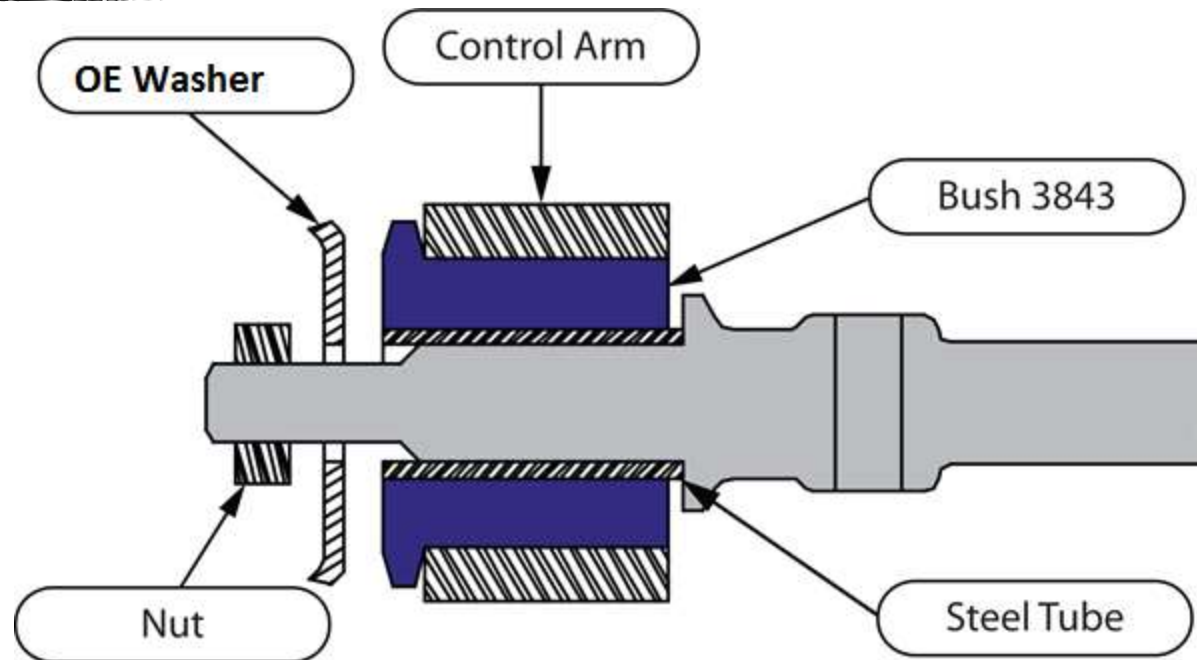

- With the vehicle supported on jack stands or hoist, remove the wheels to gain access to remove the upper control arms.
- Taking care not to damage the arm use an air chisel to remove both bushes including the shells completely.
- Remove all burrs and sharp edges and Install the new bushes into the arms using the image above as a guide.
- Using the grease supplied, liberally apply it to the polyurethane bore of the bush, the outside of the steel crush tube, and then push the tube into the bush. Orientate the OE washer so the dished section is away from the bush (see image above)
- Refit the control arms to the vehicle, tighten all bolts to the manufacturers torque specifications.
- Refit wheels. Carry out a wheel alignment.

Note: Polyurethane bushings must be fitted to both sides of the vehicle. This kit should be installed by a Qualified Motor Mechanic.