


Fitting Instructions #2997IS

Mitsubishi Triton ML, MN

Front Upper Control Arm Inner Bushing

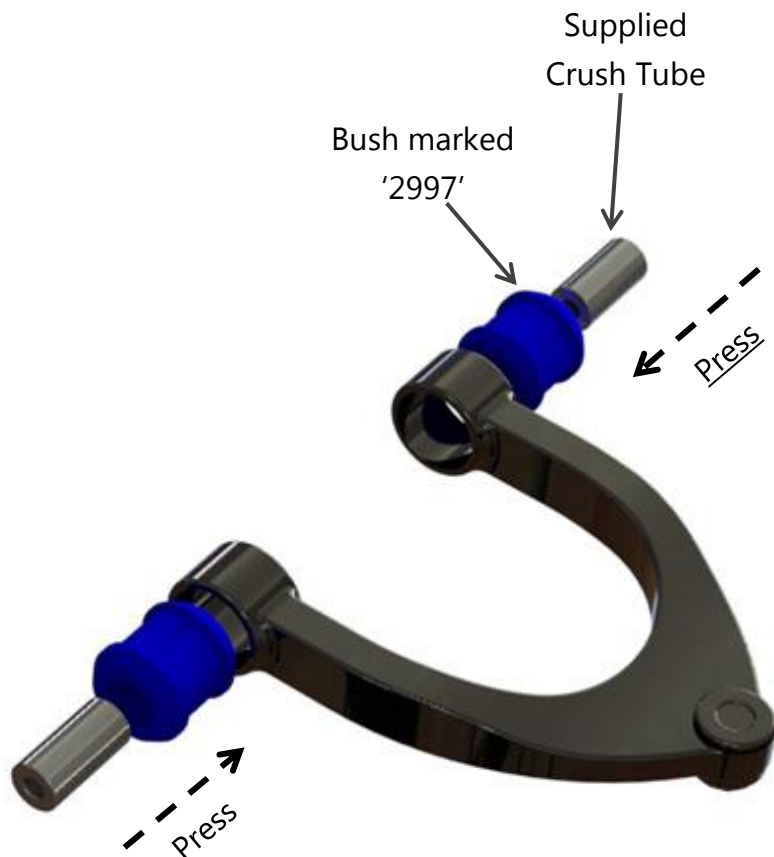

Note: Polyurethane bushings must be fitted to both sides of the vehicle.

- Wheel-align the vehicle before the job is started and note settings;
- With the vehicle on jack stands, remove the front upper control arms
- Remove the original bushes including the steel shell. *Note:* due to the accessibility of placing the receiver on the front upper control arm, you may have to burn/cut out the bush depending on the pressing tools you have;
- Clean housing areas to remove any old original bushing materials. Grease up all mating surfaces and press in the new polyurethane bushes;
- Apply the white grease supplied to the bore of the bush and the steel crush tubes and then, press in the crush tubes;
- Refit the front upper control arms to the car, making sure you tighten the bolts with the arm held at 90 degrees to the mounts to give you the maximum camber offset;
- Re-assembly the rest of the car. Carry out a wheel alignment.

Note: manufactures torque setting must be used on all bolts and nuts.