


Fitting Instructions #5426IS

Ford Ranger PX1/2

Manual Gear Shifter Bushings

Note: These components must be fitted by qualified persons only, to factory specifications, as per factory service manual.

- Ensure transmission is set to neutral. Following manufacturer's instruction, remove gearbox from the vehicle to access and remove the manual shift lever.
- Replace bushings as per the location in the picture beside.
- For 5426A: remove the casing and the OE bushing. Apply grease on the poly bush and slip it on the pin.

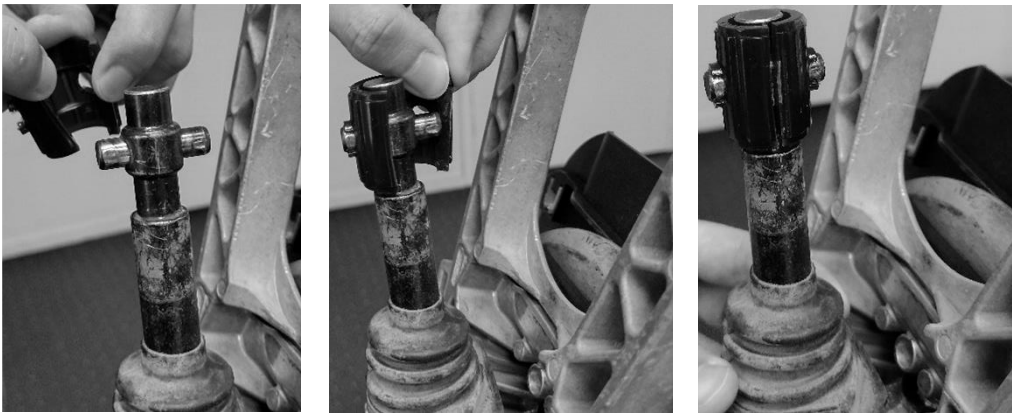

- For 5426B: remove OE bushings including the steel shells with an Arbor Press. Clean housing area and apply the supplied grease before pressing the new poly bushes.
- Apply grease to the outside of the steel crush tube, then press it into the poly bush. Note: the step of the crush tube must be installed on the inside so the washers can be fitted the same as the original setup.
- Refit the assembly in reverse order. Ensure to use manufacturer recommended torque settings.

