

Fitting Instructions #4805IS

Toyota LandCruiser 200 Series

Rear Sway Bar Link Upper Bushing

- Jack the vehicle up and support on jack stands/hoist and remove the sway bar links;
- Remove original upper rubber bushes from the sway bar link;
- Apply the supplied grease on the bore surface of the new '4805' SuperPro bushes and install them, as shown in the Figure 01;
- Apply the same procedure to the other sway bar link;
- Refit the control arms to the vehicle and tighten all bolts to manufacture's torque settings.

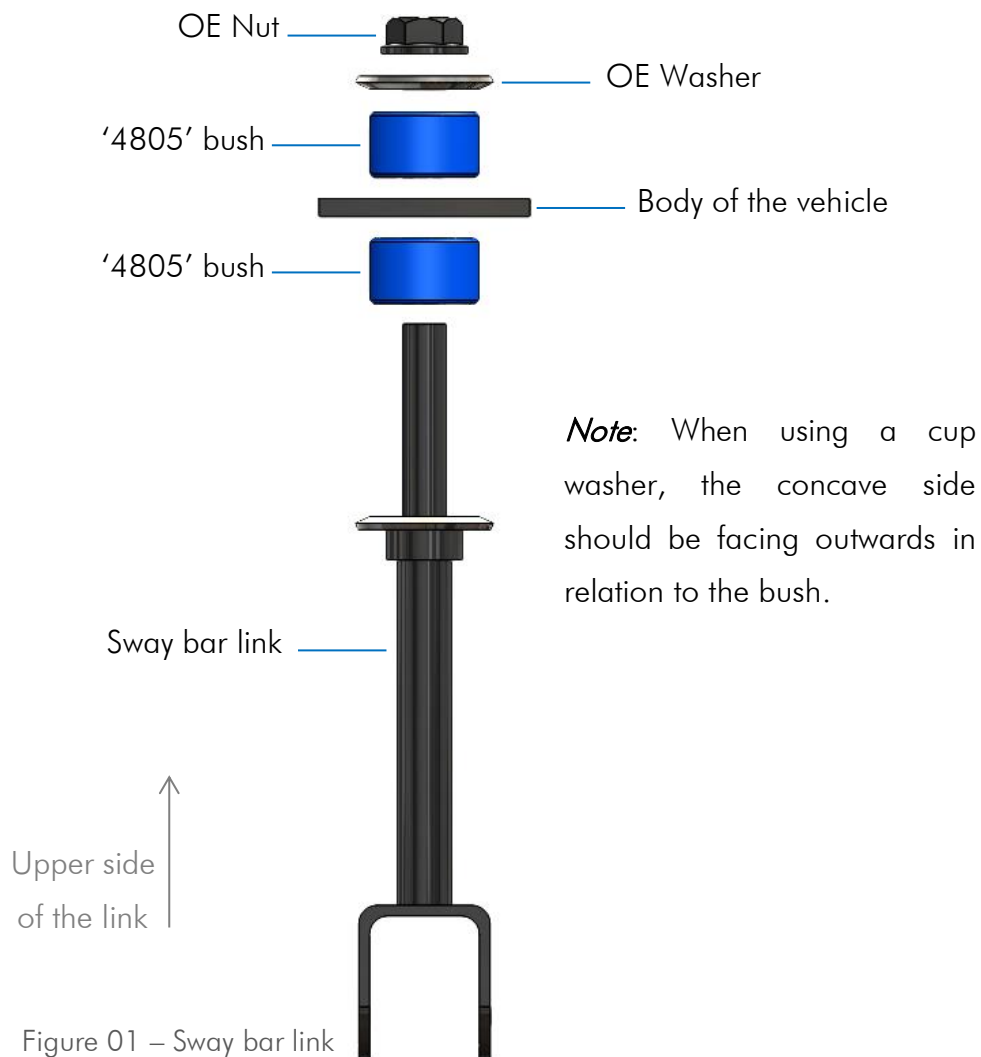


Figure 01 – Sway bar link

Note: Polyurethane bushings must be fitted to both sides of the vehicle.