


## Fitting Instructions #3234IS

### Jaguar S Type

#### Control Arm Lower Rear hyme joint

- With the vehicle on jack stands/hoist, remove the control arms;
- Use a hydraulic press to remove the OE Hyme joint
- Clean out housing and remove and burrs created in the removal process
- Using a hydraulic press install replacement hyme joint

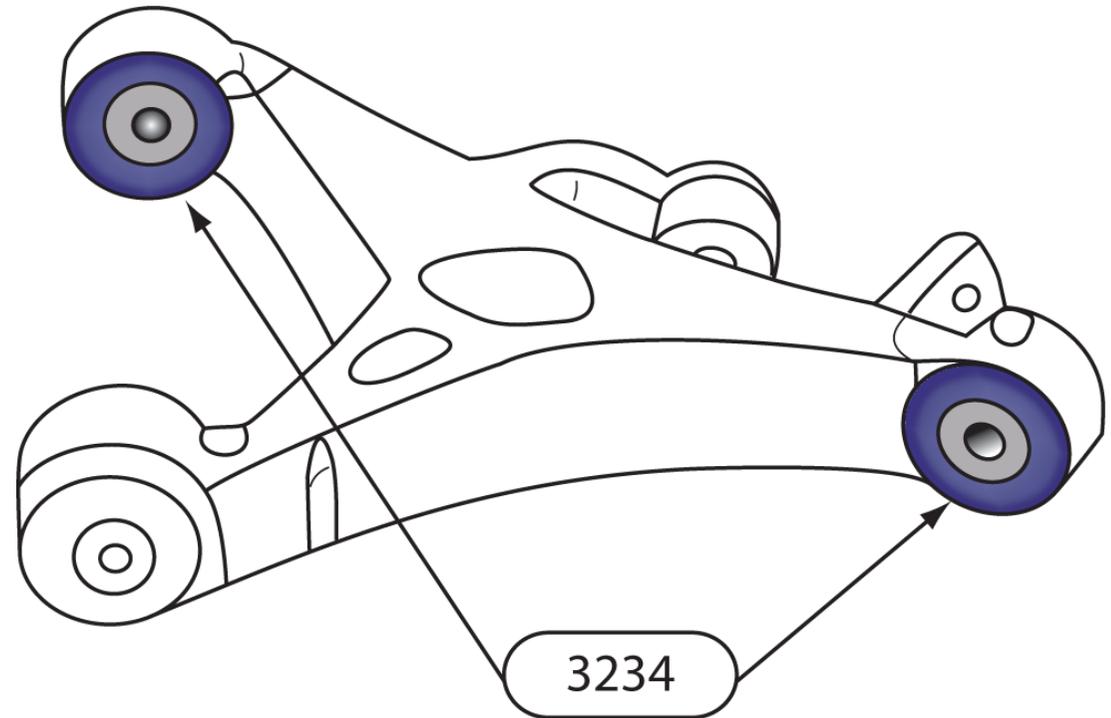

- Refit the control arms to the vehicle, tighten all bolts to the manufacturers torque specifications;
- Re-assembly the rest of the car. Carry out a wheel alignment.

**Note:** Recheck at 1000 km