

Fitting Instructions



SKU

PRODUCT

T7K787

TAG Heavy Duty Towbar to suit KIA Seltos (08/2019 - on)



Scan for latest version of these instructions

SPECIFICATIONS

- Towbar Class: Heavy Duty
- Towing Capacity: 1250kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Fitting Instructions



Step-By-Step Instructions

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded, or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present
- All load ratings shown are under the assumption your trailer has a functional braking system installed
- When installed in positions other than the one depicted in these instructions the Tow Ball Mount may interfere or obstruct certain features of your vehicle (tailgate opening, Chassis clearance, etc.)

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar. (Tray, Canopy, Suspension etc.)
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- The high tensile fasteners supplied with this product are an integral feature to achieving the specified rating, if replacement is required ensure that fasteners of the same grade (8.8) & quality are used. Contact an authorised TAG distributor or the TAG fitment centre - (07) 3208 3022 - if further information is required.


Towbar Maintenance and Care:

It is recommended, when not in use, the Tow Ball Mount assembly and class 4 Pin and Clip is stored inside the car away from moisture to prevent standing water from forming rust. Inspect to ensure, on regular basis, fasteners are torqued to the specifications below and in good condition.

Ensure that the fitting instructions are read and understood prior to fitment

Place these instructions in the vehicle's glovebox after installation is completed

Towbar Fitting Instructions

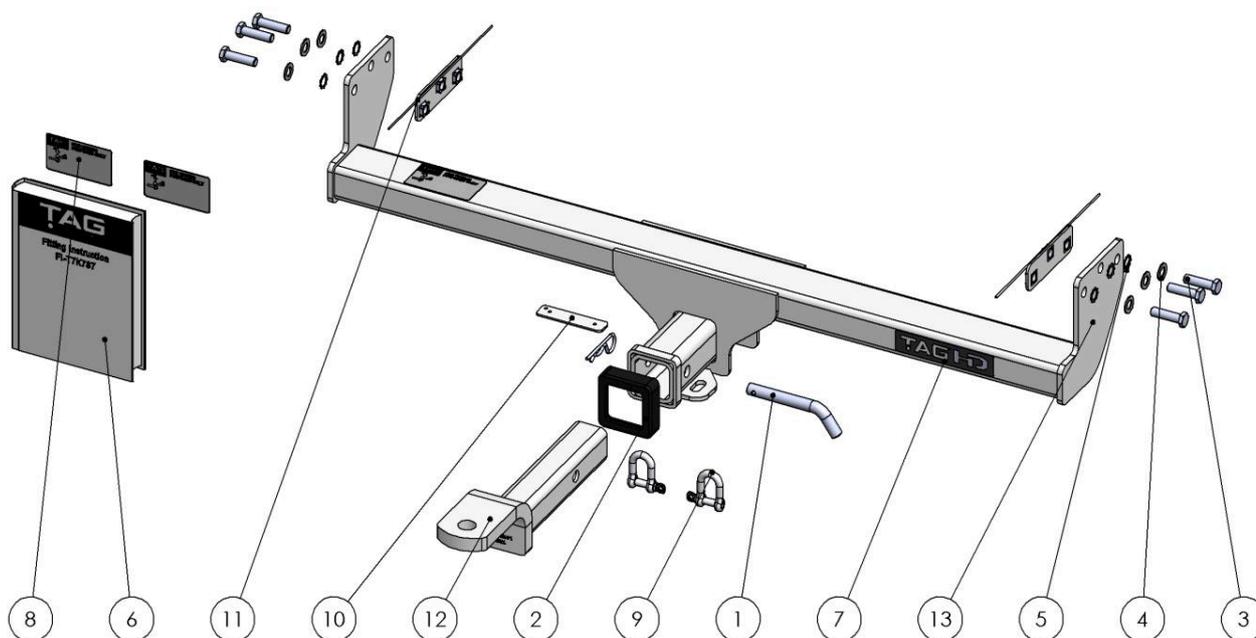

Tools Required: Spanners, Sockets, Screwdriver, Torque wrench

ITEM NO.	DESCRIPTION	QTY.
1	Class 4 Pin & Clip	1
2	Cover Hitch Receiver Collar TAG	1
3	M12X45 1.75 PITCH B/O GR8.8 ZINC CLEAR HEX HEAD	6
4	M12 Flat Washer Zinc Clear	6
5	M12 Shakeproof Washer	6
6	Fitting Instruction	1
7	TAG HD Sticker 150 x 33mm	1


ITEM NO.	DESCRIPTION	QTY.
8	TAG Compliance plate	3
9	TAG D-Shackle - 10mm, 1000kg, Galvanised	2
10	Backing Plate - 7 Pin Flat Connector	1
11	Nut Plate Assembly	2
12	Ball Mount STD L4 Lug 240 Shank 90 Hole	1
13	Weld Assembly T7K787	1

Towbar Fitting Instructions



Step 1. Remove Bumper

- a. Remove 2x phillips head screws & 1x hex head screw from inside both PS & DS wheel arches.
- b. Remove 1x plastic scrivet from the bottom of the bumper directly behind both PS & DS wheel arches
- c. On DS, remove 2x plastic scrivet & 1x plastic nut holding plastic trim to bumper & chassis.
- d. Remove 2x phillips head screws from taillight assemblies and remove taillights rearward.
- e. Remove 2x scrivets from under taillights.
- f. From under vehicle, remove 2x M10 nuts fastening crash bar to body flange on PS & DS.
- g. Retain all fasteners.
- h. Disconnect wiring loom on PS of bumper.
- i. Beginning at each wheel arch, gently peel bumper away from body and remove from vehicle. **Plastic crash bar is removed with bumper. Do not separate.**

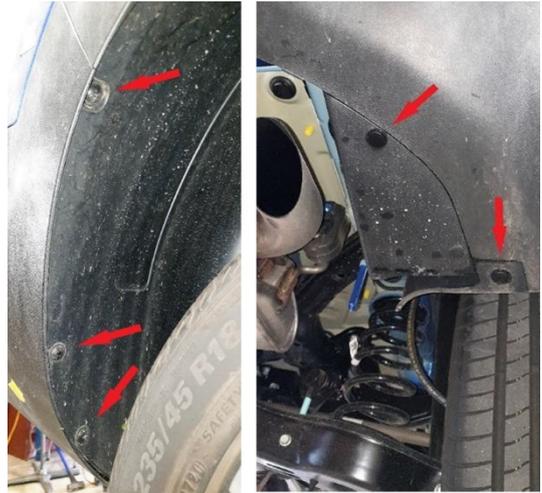

Step 2. Fit Towbar

- a. Insert nut plates into chassis taking note of orientation of holes.
- b. Lift towbar up to outside of chassis and insert 3x M12x 35 bolts with flat & shake proof washers per side.
- c. Tighten all bolts.
- d. No bumper cut is required.**
- e. Re-fit bumper in reverse of steps 1a-1i.
- f. Trim DS plastic cover to fit around towbar and re-fit.
- g. Fit tow ball & D Shackles.

Towbar Fitting Instructions



Step 4. Fit Ball Mount and Apply Door Sticker

- a. Attach plastic hitch surround to receiver.
- b. Insert ball mount into hitch receiver and secure with the pull pin and R-clip.
- c. Apply one of the compliance labels to the pillar of the driver's door.
- d. Leave the remaining label & the fitting instructions in the vehicle handbook.



Torque table for bolt tightening

Diameter	Pitch	Grade	Torque	Unit
M8	1.25	8.8	29	Nm
M10	1.25	8.8	57	Nm
M10	1.50	8.8	44	Nm
M12	1.25	8.8	101	Nm
M12	1.50	8.8	97	Nm
M12	1.75	8.8	77	Nm
M14	2.00	8.8	122	Nm
M16	2.00	8.8	190	Nm
Imperial Bolt Torque Settings				
3/8"	UNC	8	44.75	Nm
1/2"	UNC	8	108.5	Nm

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au