

Fitting Instructions



SKU

PRODUCT

T2P620

**TAG Standard Duty Towbar
to suit Volkswagen Golf
(08/2012 - on)**



Scan for latest
version of these
instructions

SPECIFICATIONS

- Towbar Class: Standard Duty
- Towing Capacity: 1600kg

IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

Towbar Fitting Instructions



Step-By-Step Instructions

Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.


Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.

After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure then ask your towbar supplier.

Tighten all bolts as specified on the last page.

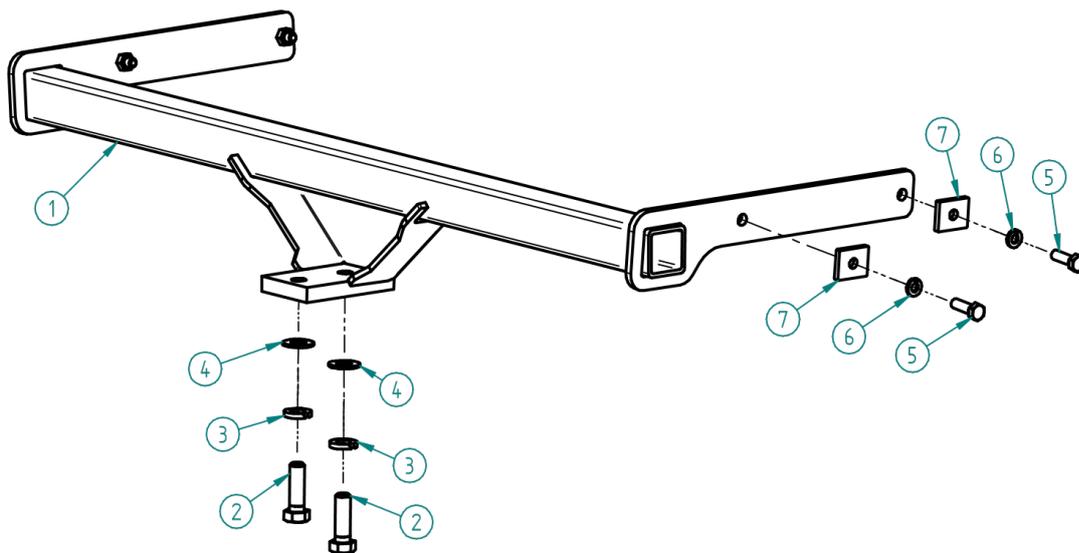

Scheme1

Towbar Fitting Instructions



T2P620 Hardware KIT	
Item	Quantity
1. Towbar	1
2. M16 x 50 bolt	2
3. M16 spring washer	2
4. M16 flat washer	2
5. M10 x 35 x 1.5 pitch bolt	4
6. M10 spring washer	4
7. Plate	4
8. L233C tongue	1
9. Compliance plate	1
10. Door sticker	1

1.



Pic.1

1.1 Remove spare wheel

1.2 Remove rear beaver panel inner boot trim, pull it upwards (boot trim is attached only with clips)

Towbar Fitting Instructions



2.




Pic.2

2.1 Remove hex screws A and B as shown on Pic.2

3.



Pic.3

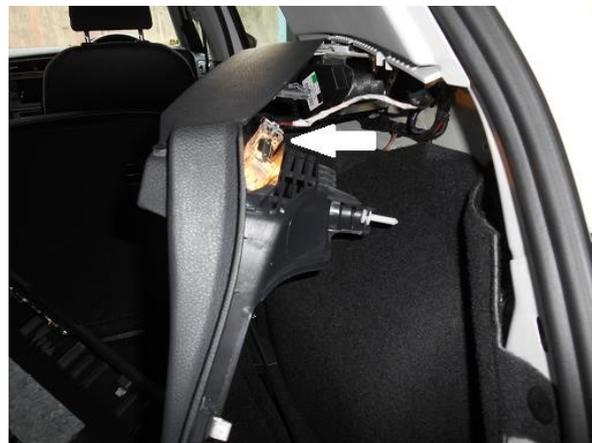

Pic.4


3.1 Pull passenger side internal plastic panel away as shown on Pic.3

3.2 When undoing drivers side panel, remove boot light plug as shown on Pic.4

Towbar Fitting Instructions



4.

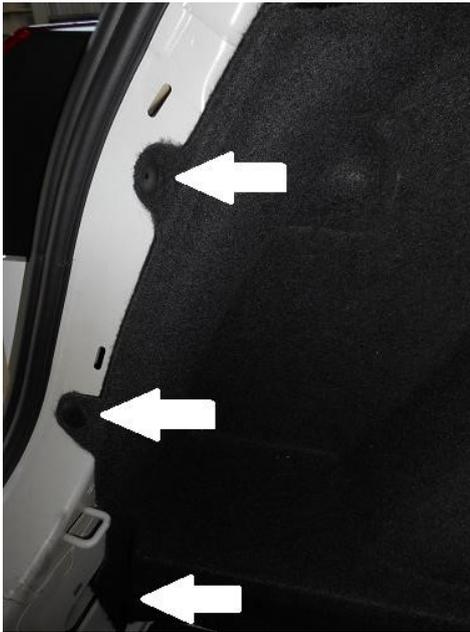

Pic.5

4.1 Remove plastic scrivenets as shown on Pic.5

5.



Pic.6

5.1 Remove tail light plug as shown on Pic.6

5.2 Unscrew tail light tensioner and remove tail light

Towbar Fitting Instructions



6.



Pic.7



Pic.8

6.1 Remove hex screws as shown on Pic.7 and Pic.8

7.



Pic.9

7.1 Undo hex screws and remove plastic clips as shown on Pic.9

7.2 Remove bumper bar

Towbar Fitting Instructions



8.



Pic.10

8.1 Slide towbar end plates into chassis rail

9.




Pic.11

9.1 Tighten bolts as shown on Pic.11 and Scheme 1

9.2 Tighten bolts with the torque wrench

10.

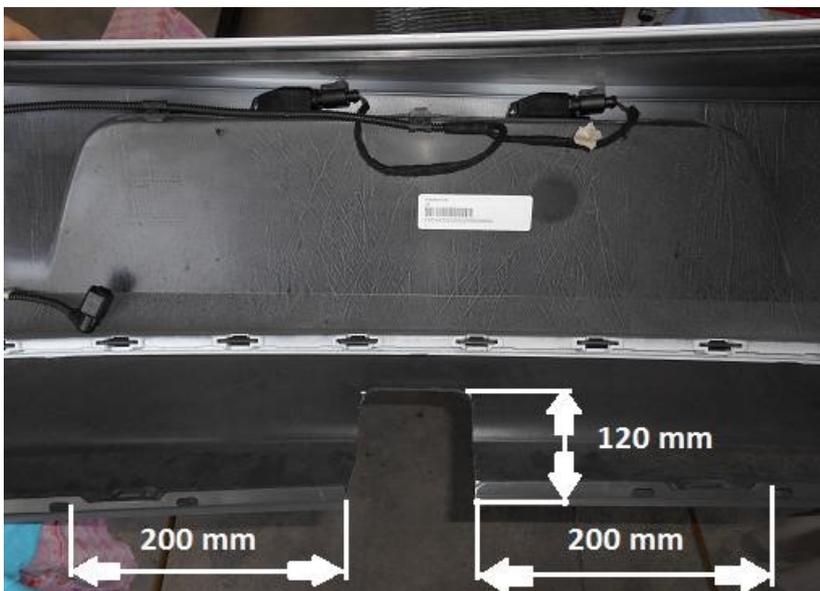

Pic.12

10.1 Make the cut out in the bumper bar with given measurements

Towbar Fitting Instructions



11.

11.1 Fit supplied compliance plate to the towbar and door sticker inside of the driver's door pillar.

11.2 Refit the bumper bar and tail lights in reverse order

11.3 Mount the lug mount to the towbar

Torque Table for Bolt Tightening

Metric GRADE 8.8	UNC GRADE 8
M6 – 12.5 Nm	3/8 – 50 Nm
M8 – 30 Nm	1/2 – 125 Nm
M10 – 60 Nm	5/8 – 245 Nm
M12 – 103 Nm	
M14 – 167 Nm	

TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit www.swd.com.au