

# Fitting Instructions



SKU

PRODUCT

**T4F028**

## **TAG HEAVY DUTY TOWBAR to suit Ford Territory (04/2004 - 10/2016)**



Scan for latest  
version of these  
instructions

### SPECIFICATIONS

- Towbar Class: Heavy Duty
- Towing Capacity: 2700kg

### IN THIS GUIDE

- Fitment Instructions
- Torque Settings
- Warranty Info

## Step-By-Step Instructions

### Warning:

Safety First: Always use correct safety equipment.

This towbar is NOT to be drilled, cut, welded or modified in any way.

Check the surrounding area before drilling into chassis or body panels for fuel lines, wiring harnesses and other components that may be a hazard.

### General:

Before fitting this towbar read fitting instructions and check installation hardware is correct.

Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.


After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.

If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change.

If you are not sure, then ask your towbar supplier.

Tighten all bolts as specified on the last page.


1. Remove bumper bar.
  - a. Remove clips and screws from wheel arch.
  - b. Remove tail lights.
  - c. Remove bolt and screw from behind each tail light.
  - d. Remove plastic scrivets from under vehicle.
2. Do bumper cut by following genuine markings on inside of bumper. (Note: as bumper profiles can change please check your measurements before cutting to make sure the dimensions are correct.)

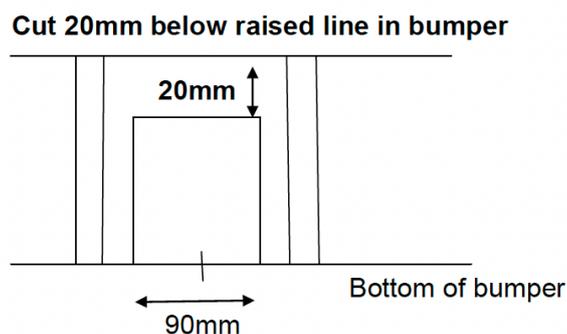

# Towbar Fitting Instructions



\*\* Bumper shape different on passenger side

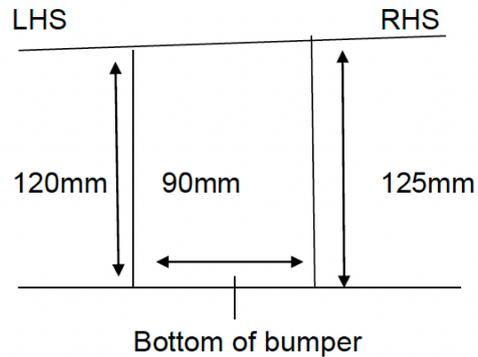

3. Remove forward arms off tow bar.
4. Fit cross bar to rear of car using 12mm corflex bolts.
5. Cut rear beaver panel to join forward arms with rear tow bar. Approximately 50mm x 25mm.
6. Using forward arms as a guide, drill four x 10mm holes.
7. Slide tapped plates into chassis rail and fit 5 x 3/8 bolts and washers through forward arms and into tapped plates.
8. Tighten all bolts to torque settings.
9. Re-fit bumper and taillights
10. Fit ball mount with pin and clip supplied.
11. Fit door sticker supplied to door.

# Towbar Fitting Instructions



## Torque table for bolt tightening

| <b>Metric GRADE 8.8</b> |
|-------------------------|
| M6 – 9.5 Nm             |
| M8 – 21.7 Nm            |
| M10 – 43.4 Nm           |
| M12 – 77.3 Nm           |
| M16 – 189.8 Nm          |

## TAG Warranty Statement

SWD warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 1300 669122 or visit [www.swd.com.au](http://www.swd.com.au)