


## CONTROL ARM BUSHES

1. Support the vehicle and disconnect the upper ball joint
2. Remove the wishbone and upper pivot pin
3. Press shelled bushes from eye in the arm. Fit shelled bushes and press to swage mark on the bush (refer diagram). Support the arm around the eye to avoid damage to the arm during the pressing operation.
4. Before assembly, lubricate end faces on the bushes with the grease provided.
5. Refit end washers and tighten lock nuts after installation.
6. Reassemble suspension as recommended in the workshop manual.
7. Tighten all components to manufacturers' recommended torque settings.

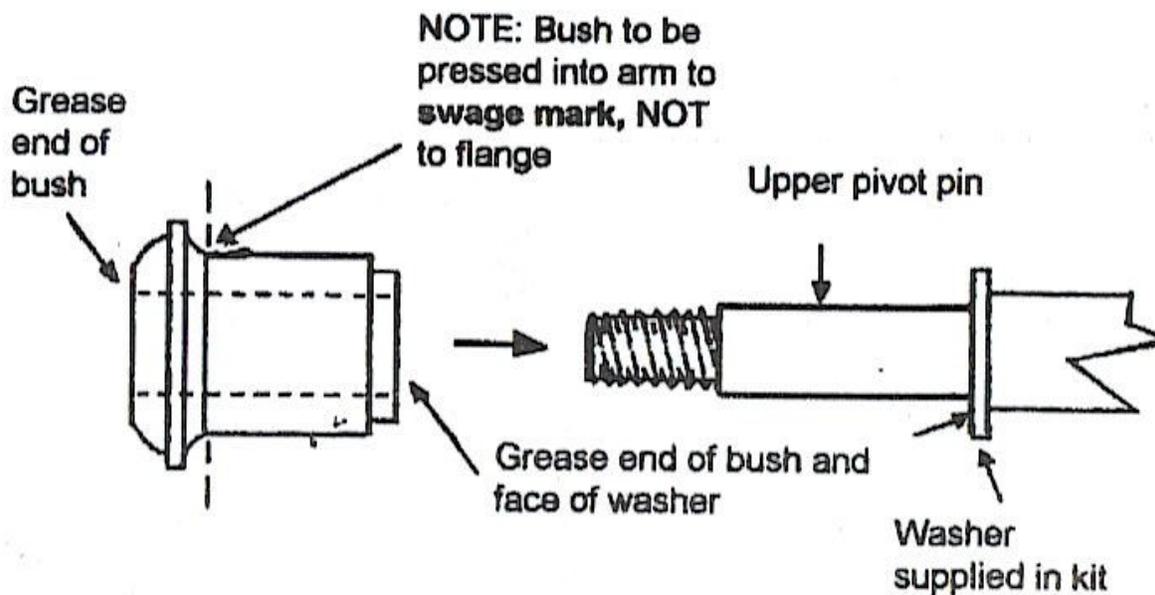

This procedure must be carried out by a qualified person

