



Instruction Sheet

Front Differential Mount



Z5203

Suits: Ford Territory SX-SY 5/04 - 5/11



N.B: This instruction sheet should be used in conjunction with the workshop manual

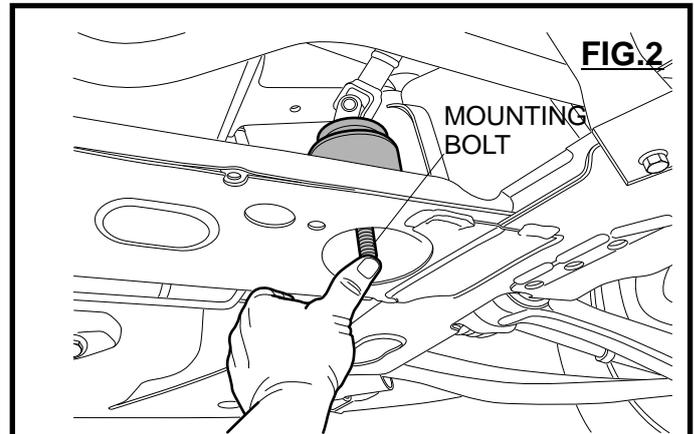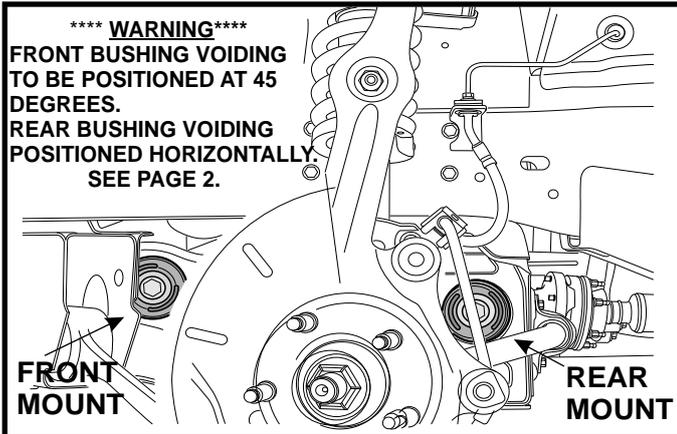

1. Once the vehicle is evenly raised and safely supported, remove the passenger side wheel. Then un-bolt the brake caliper and rotor. 2. Remove the 3 differential mounting bolts and gently push the housing away from the passenger side bushings.

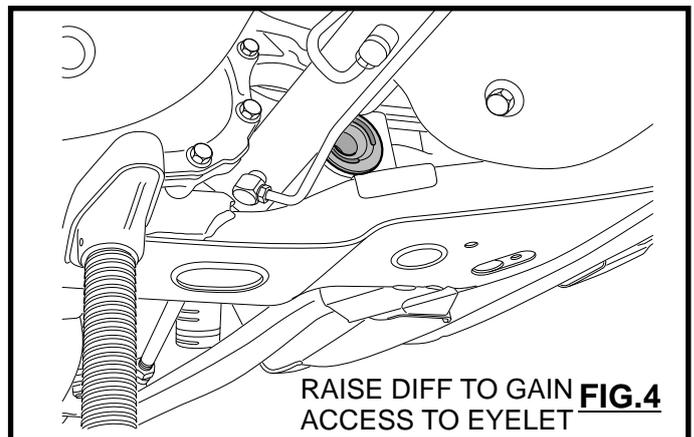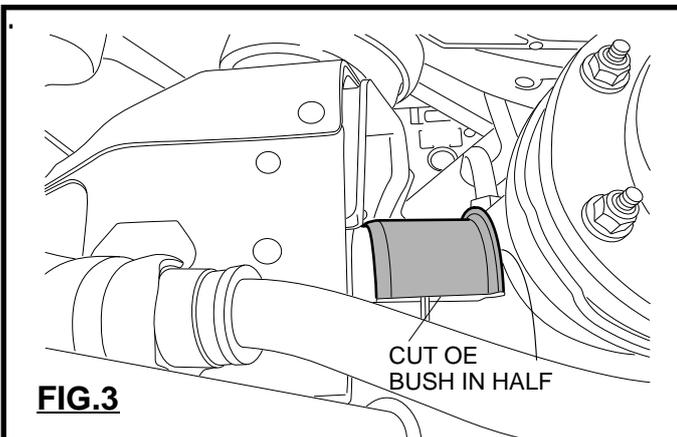

3. Insert an Air-hacksaw inside the OE bush voiding and proceed to cut the shell. To successfully remove the OE bushing it is required that you cut the shell in 2 places in a horizontal fashion. (Refer figure 3).

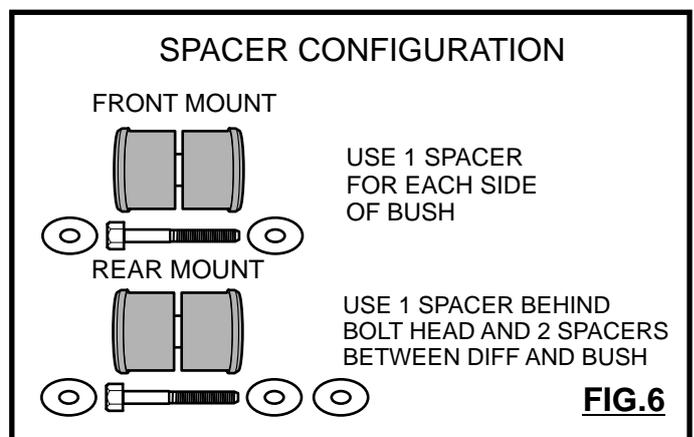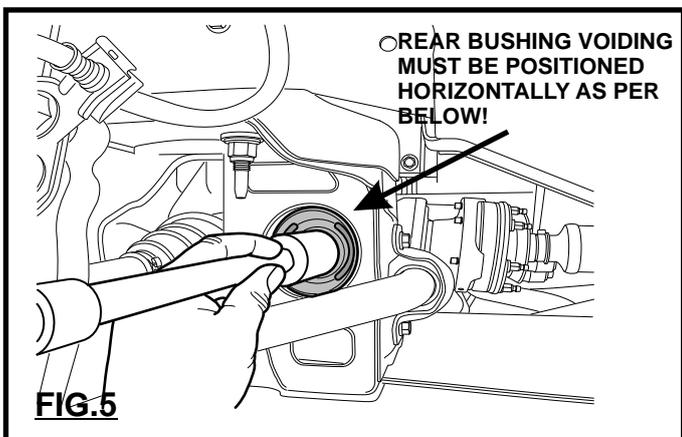

4. Once the OE bushings are removed, wipe eyelets and remove any sharp edges. 5. Insert the supplied 2-piece bushings from either side of each eyelet. Note: Bush voiding to be timed as per figure 4 and 5. Note spacer configuration as per figure 6.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

****** WARNING ******

**BUSHING VOIDING MUST
BE POSITIONED AS PER
BELOW!**

