

Fitting Instructions

Toe Lock Kit

Code: Z5030

Application: Subaru BE-BH Liberty Legacy 99-02,
BL- BP 03-06 inc GT Turbo

KCA307 toe-adjuster locking kit is designed to complement cars already fitted with KTA124 camber & toe adjustable control arms.

The kit replaces the OE or stock toe-adjuster, and eliminates the tendency of the friction based factory adjuster to move and alter the required toe settings.

Particularly relevant for race or rally vehicles or other high load applications. Can also be used with some other types of adjustable control arms.



Contents: Each kit contains:


4 x Special profile eccentric lock washers

2 x M14 x 75 x 1.5 Hi-tensile bolts

2 x Nyloc nuts to suit the bolts

Fitting: Please read the complete instructions before commencing work.

1. Whiteline recommend that all work be carried out by a qualified technician, with the vehicle at normal ride height or ideally with the vehicle on a 4 post hoist.
2. Remove the factory toe adjusting mechanism, and fit the KCA307 in the same configuration as the factory adjuster. Fit the KCA307 washers with the notched "V" section to the top.
3. Slight modifications to the washers may be required to ensure precise fitment, due to slight variations found with the production of each vehicle.
4. Tighten new lock nuts to manufacturers specifications.
5. Check and adjust wheel alignment to desired settings using adjustable KTA124 control arms.
6. Check & re-tension all fittings again after 100 kms but no more than 200 kms.

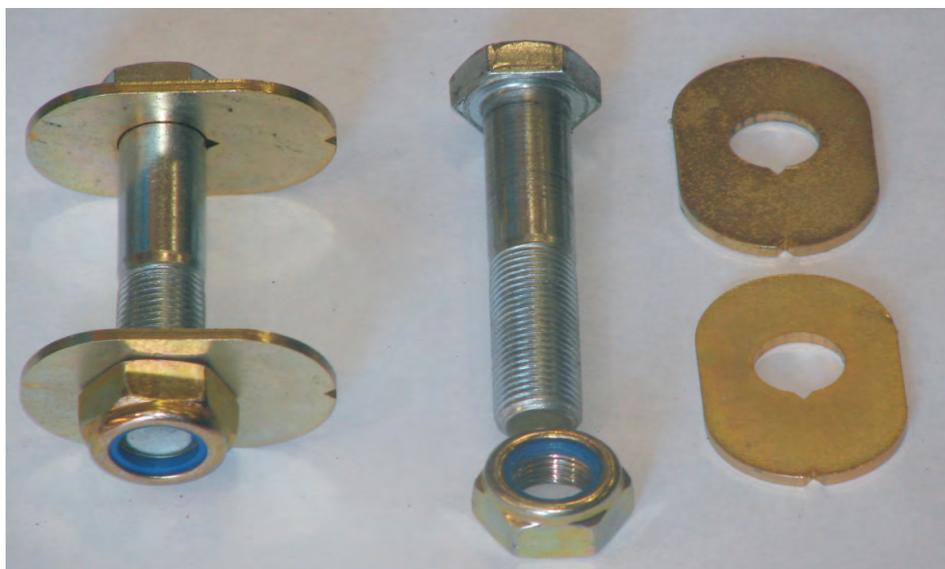

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.