

Instruction Sheet

Front Control Arm Front Bushing

Z5338

Application: Ford Falcon AU - BF Series

N.B: This instruction sheet should be used in conjunction with the workshop manual

Fig 1.

1. Raise vehicle evenly and safely support.
2. Remove front control arms from vehicle.
3. Once old bushing is removed, be sure the control arm eyelet and clevis surfaces are clean.
4. Install the larger bushing (68162) first from the inside of the arm - see Fig 1.

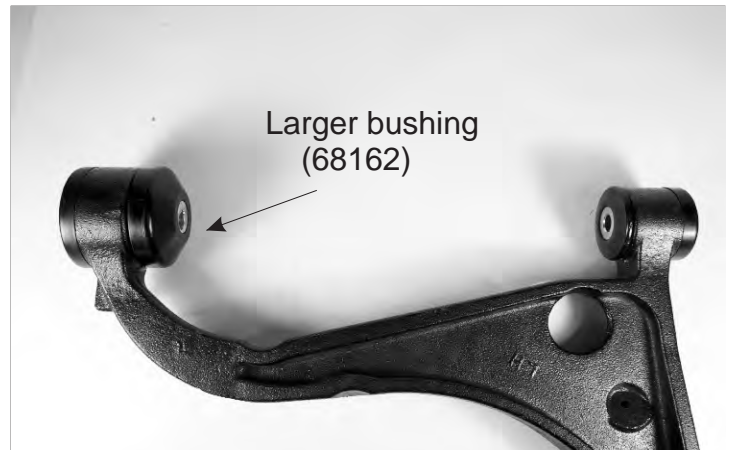


Fig 2.

5. Place the smaller bushing (68161) on the front of the arm.
6. Generously grease the ID and outer flat surfaces of the bushing.
7. Note the steel tube supplied has an offset hole - position the hole closest to the ball joint - see Fig 3.
8. Re-fit arm to vehicle - tighten all bolts as per OE specification.
9. A wheel alignment is recommended directly after the install.
10. Re-check all bolts after initial 100kms travelled.

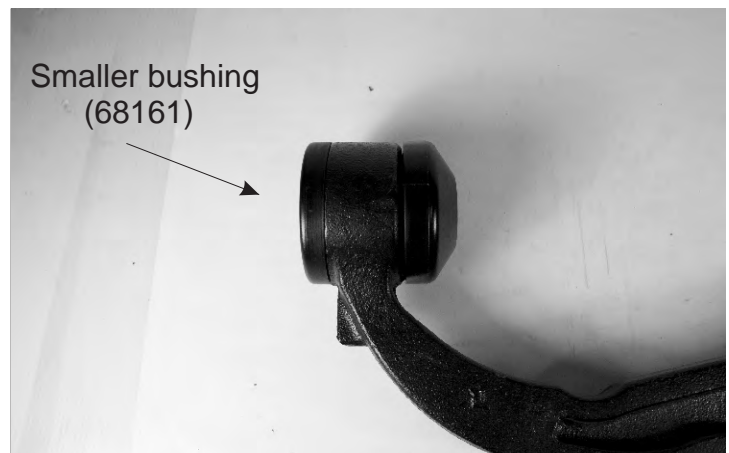


Fig3.

Note: Offset tube positioned towards ball joint.



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.