

Install Guide

Front Radius Arm - Caster Increase Washers

- Raise vehicle evenly and safely support with a hoist or stands.

Never rely on a Jack only


- Proceed to remove front wheels.
- Loosen the front arm bushing bolt. Then remove.

Note - the nut is welded to the inner plate.

- Next, remove the factory 'on-centre' plates. The outer one will need to be swung approx 60 degrees. The inner one will require the removal of a plastic clip. Refer RH images.
- Pop new off-set plates in sub-frame. For caster increase, check the hole is towards the front of car. Also be sure the plate is properly in position with both tabs sitting in each slot.
- Re-fit original bolt and tighten using supplied flange nut.

Note - a wheel alignment will be required.

- Re-check all bolts after 500kms

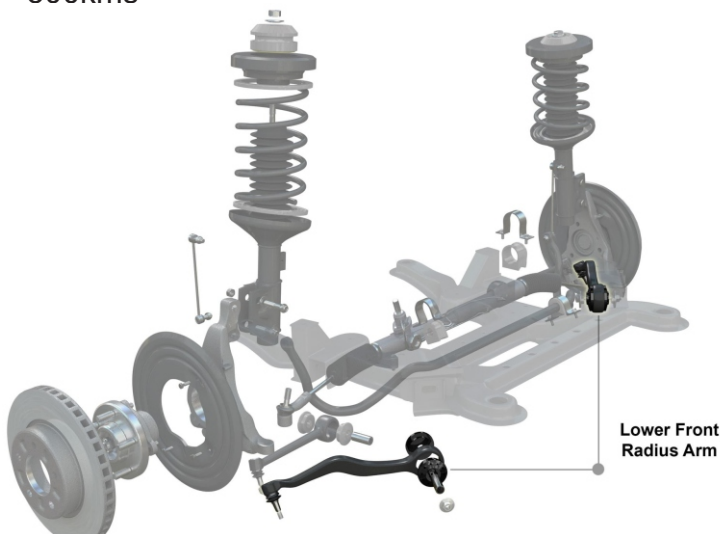

Application - Holden Commodore VE & VF
- 2007-2017

(Always refer current catalogue listing)


Contents - Offset alignment plates x4
- Flange Nuts x2



TOP TAB


NUT

PLASTIC CLIP

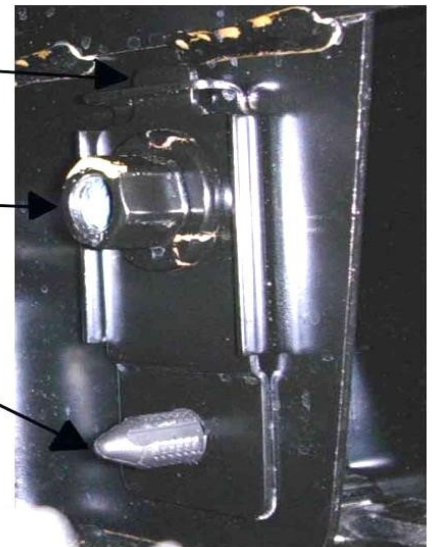

TOP TAB

OUTER TAB

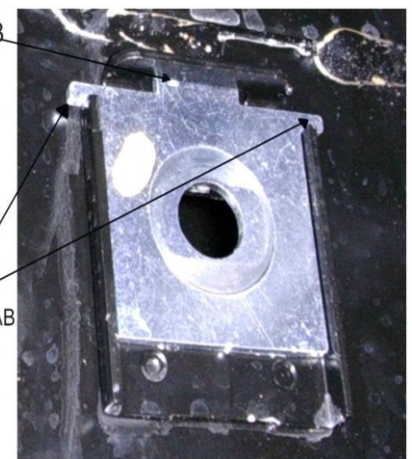

Note: These components must be fitted by a qualified person only, as per the manufacturers service manual. Also, that all relevant safety procedures are followed in addition to above.