


# Installation Guide

## Front Lower Control Arm Rear Bush Std/Offset

Suits: Toyota Corolla & Prius

*(Always refer to the current catalogue for complete application listings)*

**N.B:** This installation guide should be used in conjunction with the workshop manual.

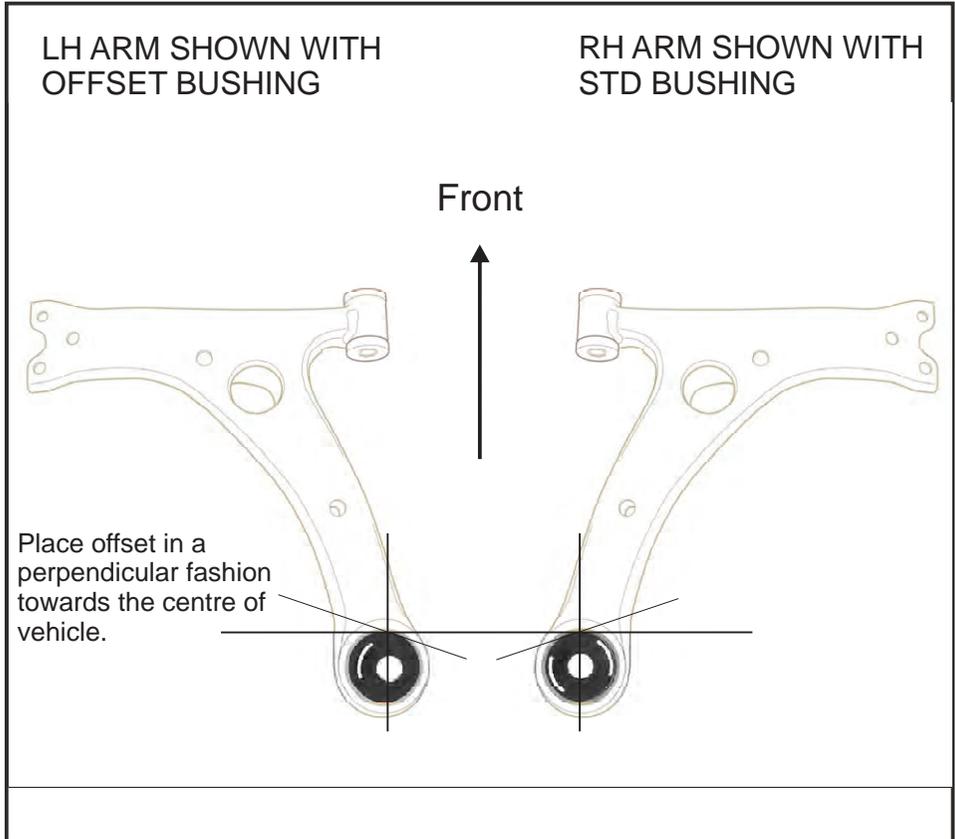

Press bushing in with voiding orientation as per above.  
Note the offset unit for max caster gain.

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.