

Installation Guide

Z 5175

Front Lower Control Arm "Rear" Bushing


Suits: **W53422** - Toyota Starlet EP82, EP85, EP91. 12/89 - 9/99
Toyota Corolla EL31 1500. 86 - 90

W53416 - Toyota Paseo EL44, EL54. 6/91 - 7/99

Toyota Starlet EP82, EP85. 12/89 - 1/96, EP91. 3/96 - 9/99

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.
All fastener torque settings should be adhered to.

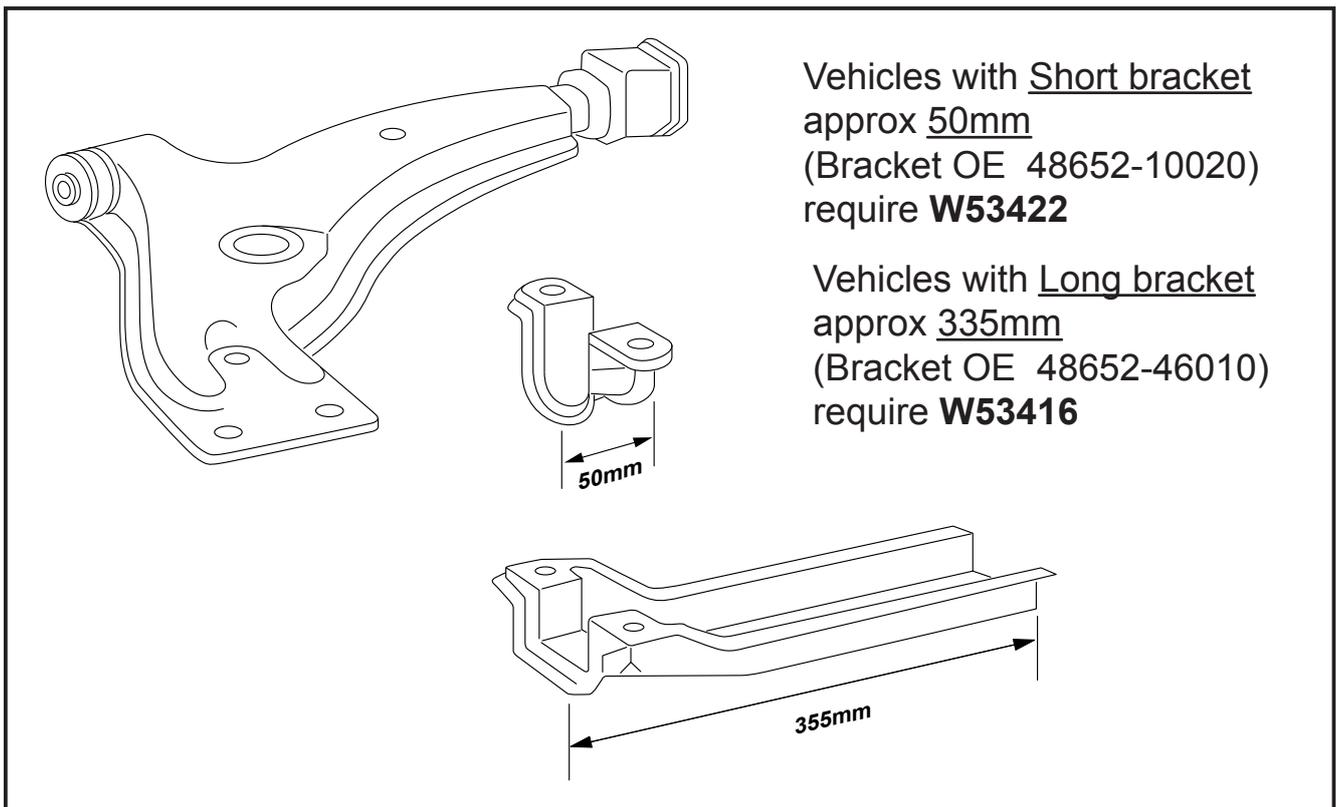

Special Note - This Vehicle series can have different rear mounting brackets. Please insure that you have the correct kit for your vehicle. The diagram below shows the different rear mounting brackets and the correct kit part numbers.

Vehicles with Short bracket approx 50mm
(Bracket OE 48652-10020)
require **W53422**

Vehicles with Long bracket approx 335mm
(Bracket OE 48652-46010)
require **W53416**

***This kit requires the original equipment steel inner tube to be re-used.
Only the Rubber part of the bush is to be removed.***

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.