

Installation Guide Front Control Arm Bushing

Z 5563

Suits: Holden Barina XC

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

Step 1




Step 2



Step 3



Step 4

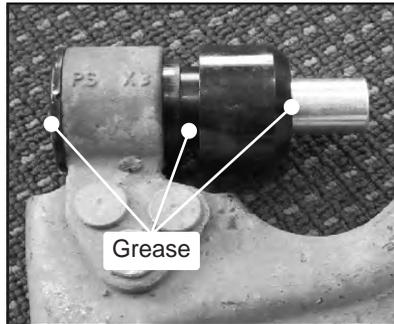

Step 1 Remove the OEM bushing by drilling a pilot hole through the rubber cushion and stepping up in drill size until the shank of the drill cuts through the outer shell.

Step 2 Using a suitable drift remove the bushing from the arm.

Step 3 Shows the drill shank breakthrough into the outer body of the OEM steel shell.

Step 4 Install the bushings as depicted in the image applying grease to the inside diameter of the bushing and the outside diameter pivoting face. Ensure mounting clevis is free of dirt and well lubricated prior to instalment.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that the workshop manual and relevant safety procedures are followed in addition to the above.

Installation Guide Front Control Arm Bushing

Z 5563

Suits: Holden Barina XC

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

Step 1




Step 2



Step 3



Step 4

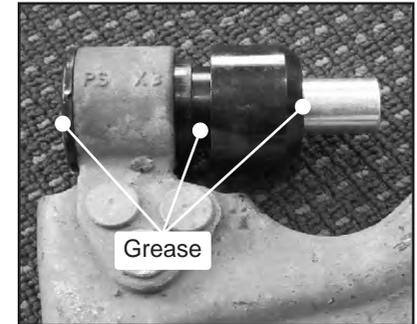

Step 1 Remove the OEM bushing by drilling a pilot hole through the rubber cushion and stepping up in drill size until the shank of the drill cuts through the outer shell.

Step 2 Using a suitable drift remove the bushing from the arm.

Step 3 Shows the drill shank breakthrough into the outer body of the OEM steel shell.

Step 4 Install the bushings as depicted in the image applying grease to the inside diameter of the bushing and the outside diameter pivoting face. Ensure mounting clevis is free of dirt and well lubricated prior to instalment.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that the workshop manual and relevant safety procedures are followed in addition to the above.