

Front Radius Arm Bushings - Caster Off-set

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support with stands.

Never rely on a Jack only.

- Proceed to remove front wheels and un-bolt Radius Rods.

Note - a hydraulic Press will be required - press out original bushing including steel outer shell.


Caution - Press new bushing **91766** into arm. Note the side of bushings with part number should face inside of vehicle.

- Grease new bushing internal diameter and side face with supplied grease only.
- Push in off-set tubes as per below.
- A wheel alignment is required immediately install.
- Re-check all bolts after 100-200kms

Application - Ford Mustang
- S550 - 2014-2018

Always refer complete catalogue listing

Contents - Bushing 91766 x2
- Off-set steel tubes c2
- Adjusting spanner
- Grease

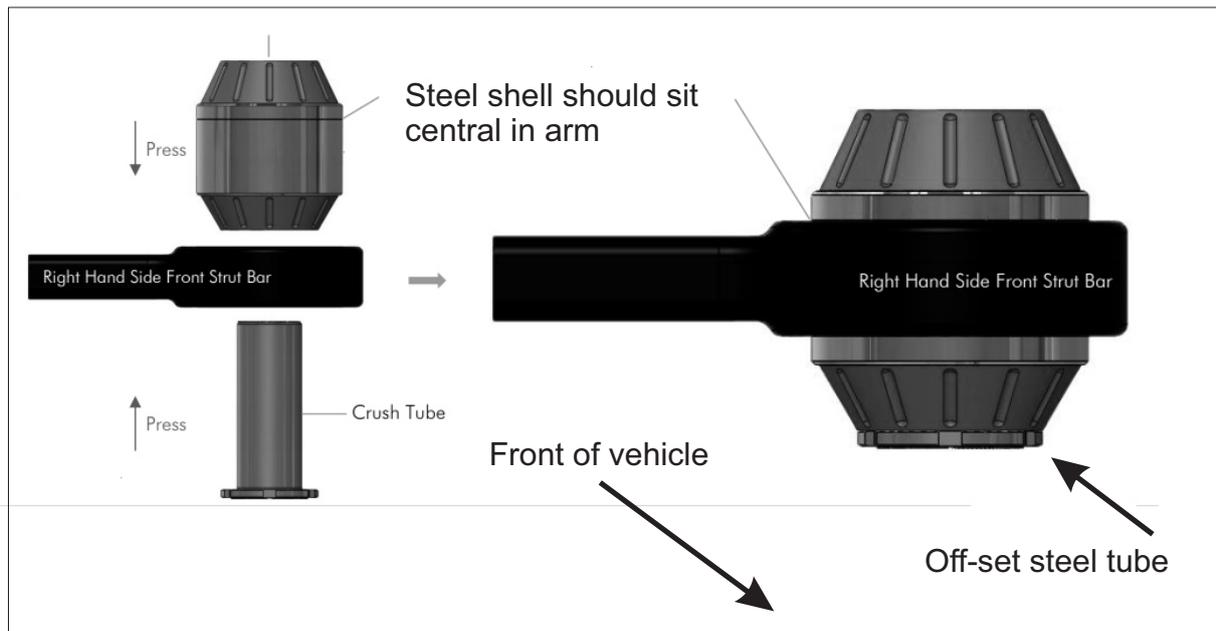

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.