

# Install Guide

## Front Upper A-Arms - Fixed Geometry Improvement

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

**It is recommended, that current wheel - alignment settings be noted prior to disassemble**

**Application** - Isuzu Dmax TF  
- Mazda Bt50 TF  
- 2020-on


*(Always refer to current catalogue listing)*

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*

- Proceed to remove front wheels.

**Contents** - 2x fixed, forged, tubular arms  
- complete with H/D ball joints  
- new split pins

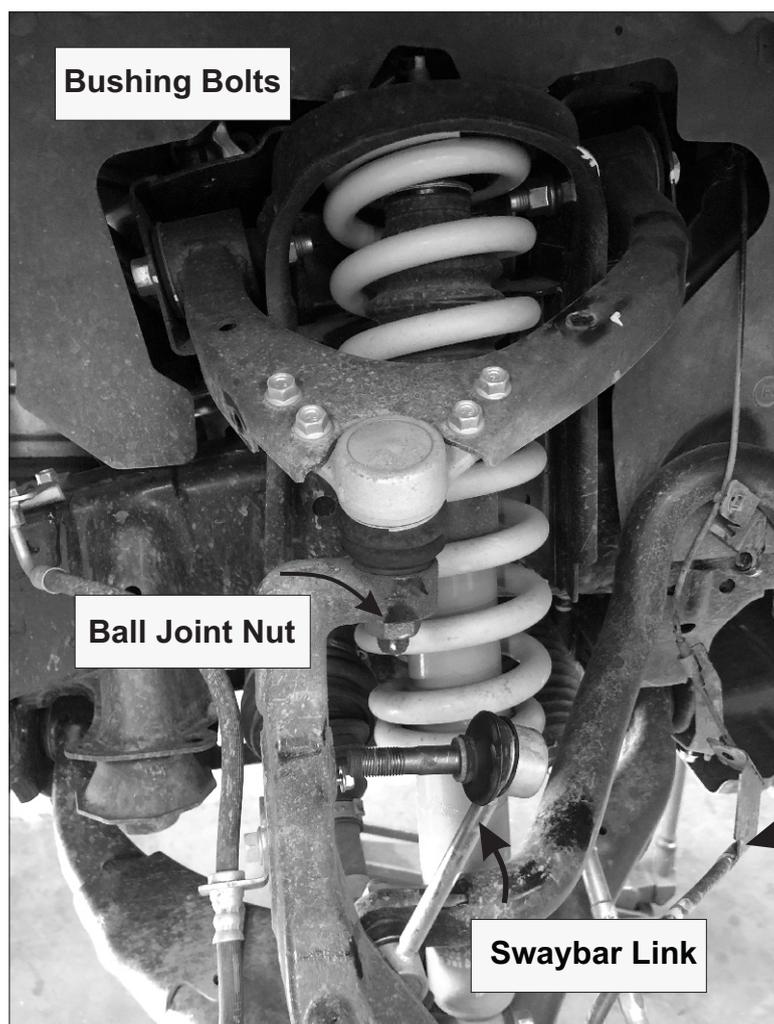

- Next - remove ABS wires from control arm.

There are 2 points - front and rear of arm.

**Note - the rear ABS bracket will be re-used.**

- Un-bolt swaybar link from hub - this will make the install easier.
- Remove ball joint split pin - and loosen nut. (Don't remove nut yet)
- Strike hub to break ball joint taper.
- Lastly - loosen and remove inner bushing bolts.

**ABS Bracket**

Refer Page 2 -

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

# Install Guide

## Front Upper A-Arms - Fixed Geometry Improvement

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.


*Continued - page 2 -*

- Proceed to bolt up new control arm to vehicle.
- Loosely start inner bushing bolts. Followed by ball joint nut.
- Pop ABS clip into front of control arm

**Refer RH image**



- Bolt up rear ABS bracket to rear of arm
- Refer LH image.**

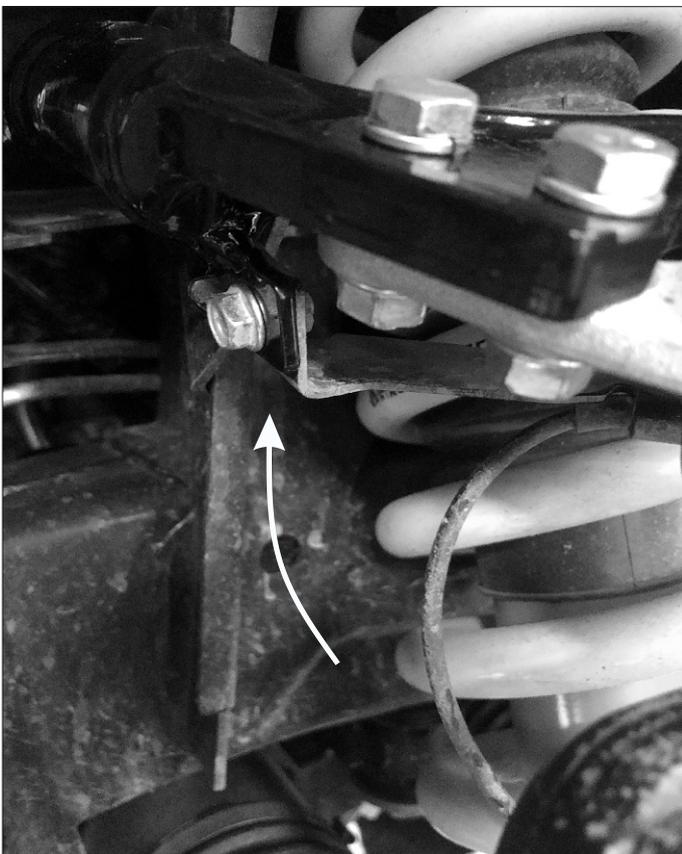

Refer Page 3 -

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

# Install Guide

## Front Upper A-Arms - Fixed Geometry Improvement

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

*Continued - page 2 -*


- Continue to tighten inner bushing bolts (use original factory bolts). Followed by ball joint nut.
- Also - bolt up swaybar link to hub and tighten.
- Confirm the 4 ball-joint nuts and bolts are tight - refer below.
- Check ABS wires are free and not fouling anywhere.

**Important - place new supplied split pin into ball joint stem.**

- The install is now complete and should reassemble the LH image.

**Important - a wheel alignment is required immediately after install.**

- Road test vehicle.
- Re-check all bolts after 200kms

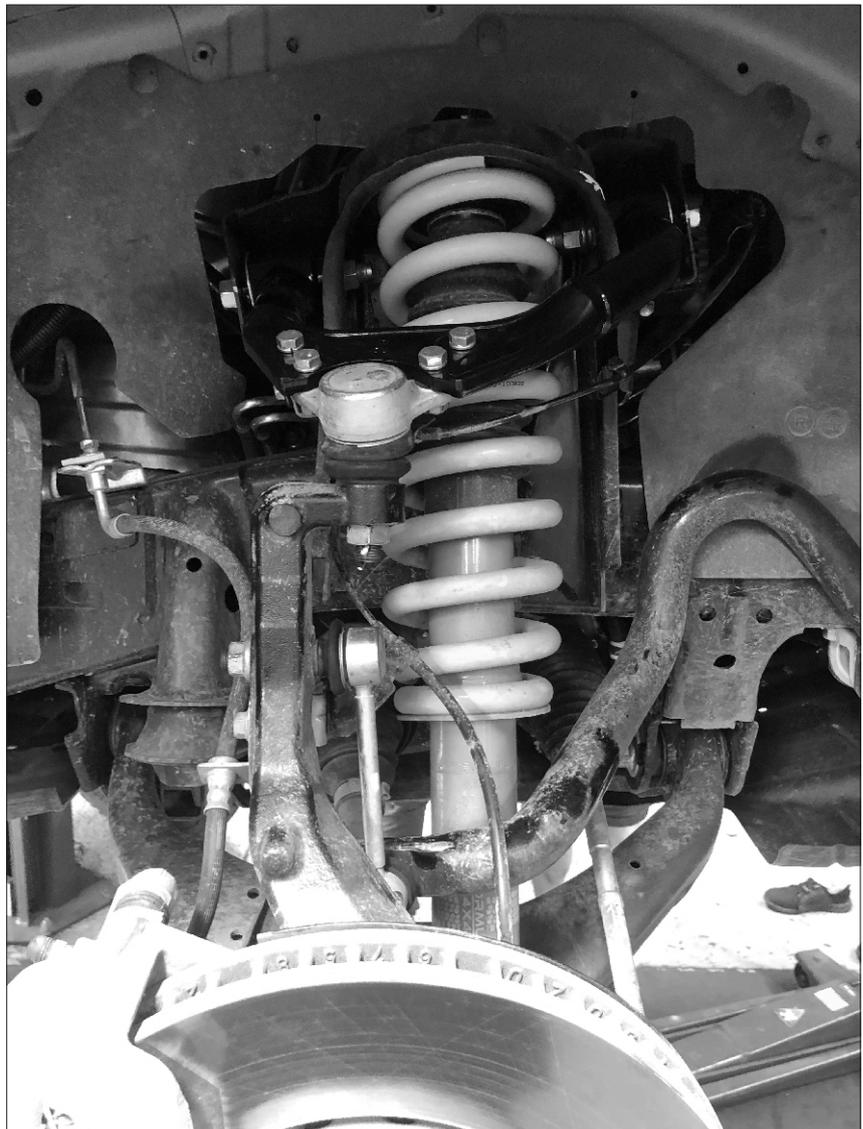

It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.