



Instructions

Front Pitch Stop - Insert

Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Toyota Corolla - 2019-on
- Petrol only

(Refer current catalogue for complete listing)


Contents - Bushing insert 69264 x1

WHITELINE pitch-stop insert is designed to improve gear shifts - offering a more direct gear-change feel whilst improving power transition to the wheels.

1. Raise vehicle evenly and safely support.

Never rely on a Jack only

2. Proceed to remove factory under tray clips and M6 bolts.

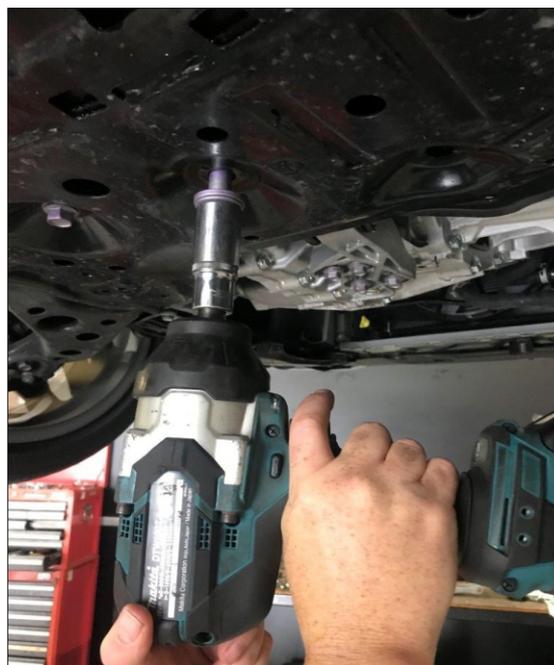

3. Start to remove the factory pit-stop by loosening the M10 bolts at gearbox,
4. Followed by the large M16 rear bolt.

Refer page 2

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



Instructions Front Pitch Stop - Insert

Note - This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Continued - page 2 -

5. Simply push insert into factory rubber voiding.

Refer both images - the insert should sit flush with OE mount - making sure for an easy install.



6. Re-fit mount to vehicle with original bolts. Torque bolts to manufacturers spec.
7. Road-test vehicle.
8. Re-check bolts after 200kms

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.