

Installation Guide

Front Control Arm Rear Bush

Z 5213


Suits: Nissan Pulsar 7/00-1/06

(Always refer to the current catalogue for complete application listings)

Instructions

1. Raise vehicle evenly and safely support with stands.
2. Un bolt control arm and press out of OE rubber bush from arm.
3. Using a suitable press, push out the OE rubber bush from the cast bracket.
4. Press in the new poly bush into cast bracket.
5. Lubricate bush ID, then press control arm into poly bush.

Note: The poly bush ID is significantly smaller than the control arm and will require pressing in.

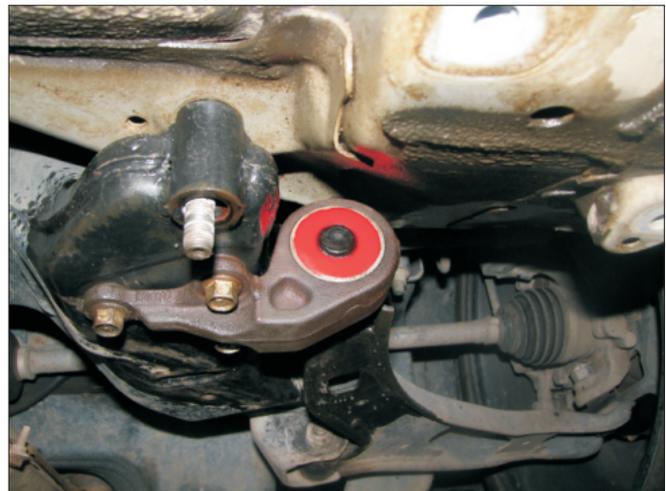

N.B: This installation guide should be used in conjunction with the workshop manual. It is recommended that a licenced workshop or trades person carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the below.