


Adjustable wishbone mounting

1. Support vehicle and remove nuts from original pivot mounts inside engine bay on inner skirt panels.
2. Swing out upper wishbone and fit pivots as direct replacements for original pivot mounts. Wheels do not need to be removed during this operation. Refit pivot points and install lock nuts supplied, in the engine bay.
3. Take camber/caster readings and use slotted shims supplied to achieve necessary final readings. Tighten lock nuts in engine bay.
4. Adjust toe settings to complete wheel alignment

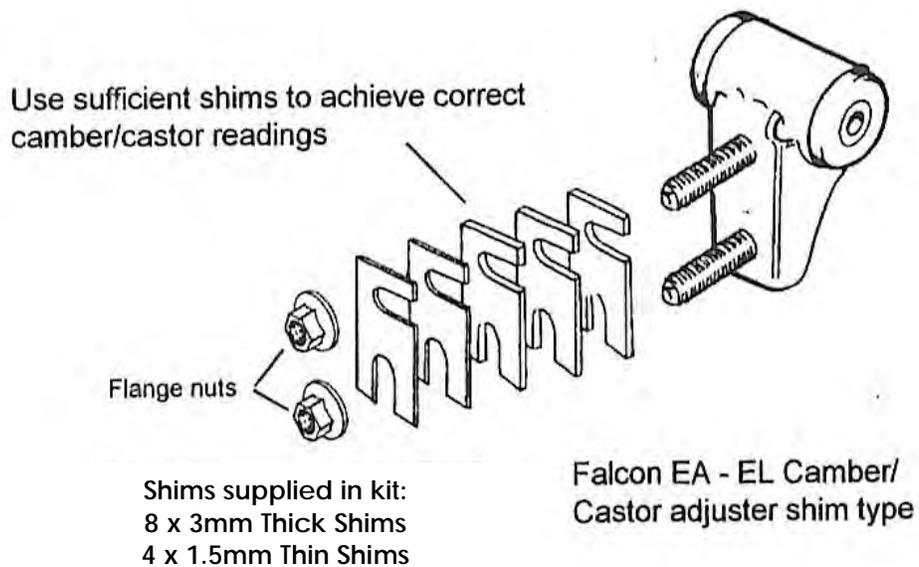

This procedure must be carried out by a qualified person