


## SWAY BAR TO WISHBONE

1. Support the vehicle and remove the front sway bar by undoing end nuts and sway bar mount brackets.
2. Cut away old rubber bushes from the arm and remove crush tubes from the sway bar. Clean any rubber deposits from wishbone eye.
3. Install bushes and sway bar, paying particular attention to lubricating bush contact faces and internal bores. Reassemble suspension as recommended in workshop manual
4. Tighten all components to manufacturers' recommended torque settings.

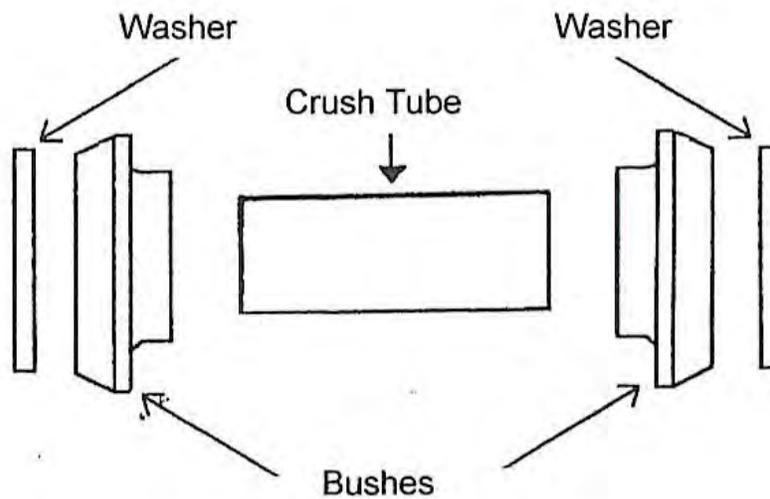

This procedure must be carried out by a qualified person