

Instructions

Rear Control (front arm) - Live Adjustable

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Nissan 370Z Z34 2009-on
- Nissan Z34 2022-on

(Always refer current catalogue listings)

Contents - 2x live adjustable control arms
- complete with polyurethane bushing

WHITELINE live adjustable control arms offer fine easy camber and toe adjustment for vehicles requiring specific specs outside of OE range. The 6061 aluminium turn-buckles + low compliance polyurethane bushing offers a strong, quality product.



- Start by raising the vehicle evenly and safely support with jack stands.

Never rely on a Jack only

- Proceed to remove rear wheels.
- Using a ratchet and/or spanner, proceed to unbolt the original control arms (front arm).

Refer LH image

It is recommended that a licenced workshop or trades-person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



Instructions

Rear Control (front arm) - Live Adjustable

This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Lay the new Whiteline arm next to the original arm.
- Using the original bolts, confirm original length. Refer RH image:
- Next, hand tighten the lock nuts.
- Bolt new arms up to vehicle using original bolts. Note image below:

Tip - for high HP cars, Loctite may aid with the lock-nut loosening prevention.

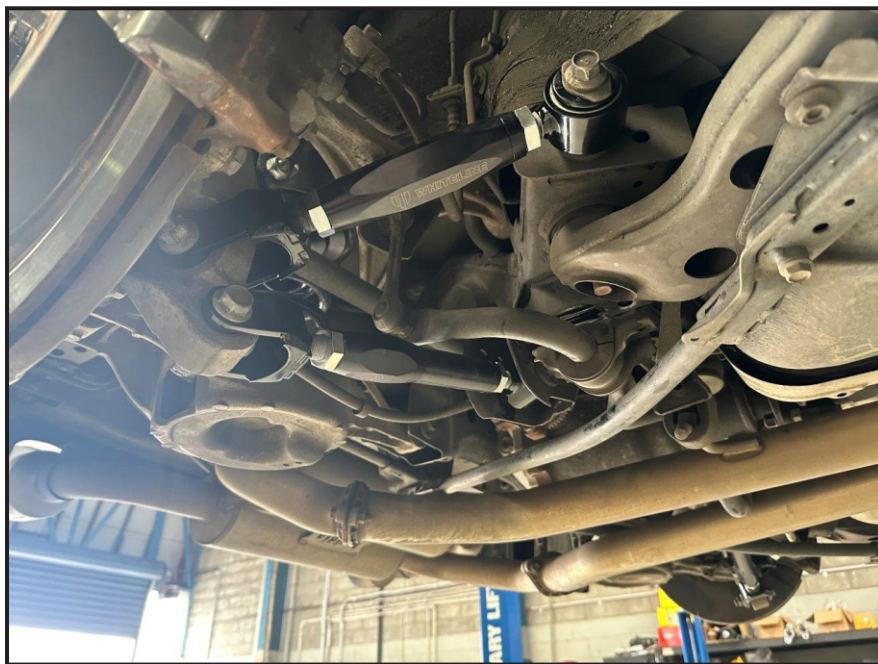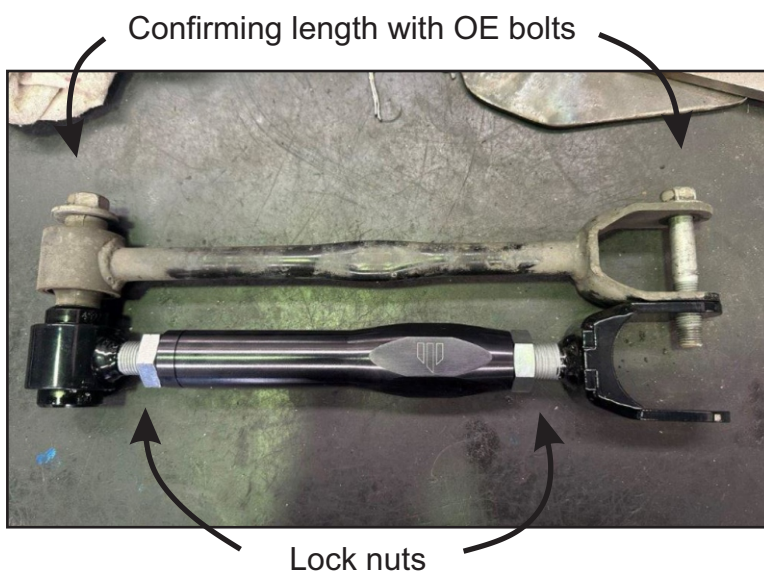

- Adjust arm length to desired length.
Example: reducing the length may help with vehicle wheel base in a lowered application.
- Tighten the OE bolts to 105Nm /80ft.lbs.
- A wheel alignment is recommended.
- Re-check all bolts after 500miles

It is recommended that a licenced workshop or trades-person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.