

Installation Guide


Front Control Arm Vertical Mount Bushing

Suits :Hyundai iLOAD

(Always refer to the current catalogue for complete application listings).

N.B.This install guide should be used in conjunction with the workshop manual.

NOTE: ALIGN BUSHING VOIDING AS PER IMAGES BELOW.

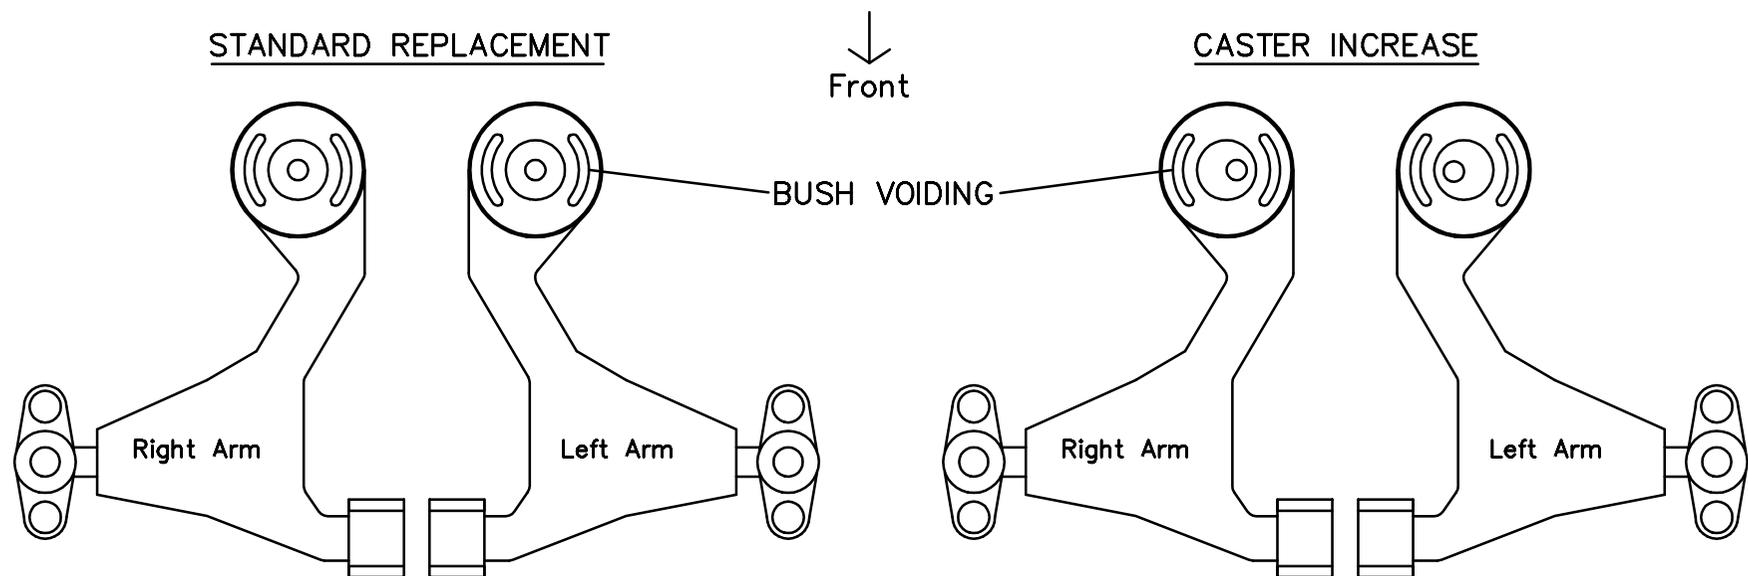

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.