

Installation Guide

Rear Lower Rear Control Arm

Z 5150

Suits: Nissan Pathfinder R51 05 - on

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

1. Raise the vehicle and remove the rear lower rear control arm.

2. Once the arm is removed you will notice locating dowels on the inside of the chassis and arm mounting points.

These will need to be removed with a grinding tool or file, refer fig 1.

3. Ensure that this area is now flat and clean and the polyurethane bush face is well greased. Refer fig 2.

4. Install the supplied washers between the bush face and mounting bracket.

Fig 1.


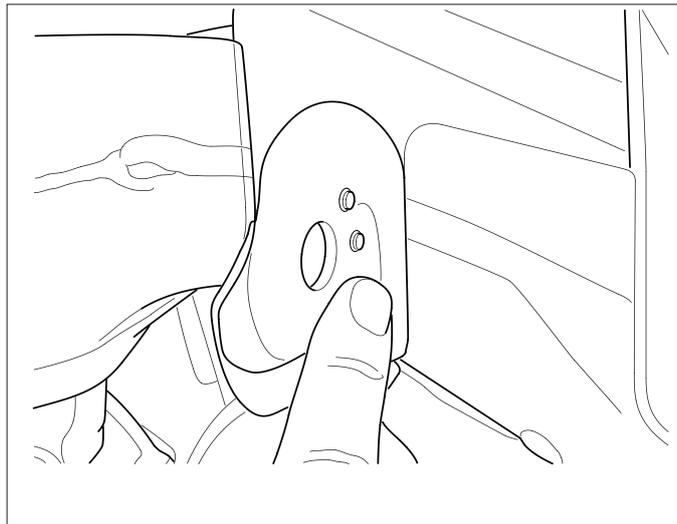


Fig 2.

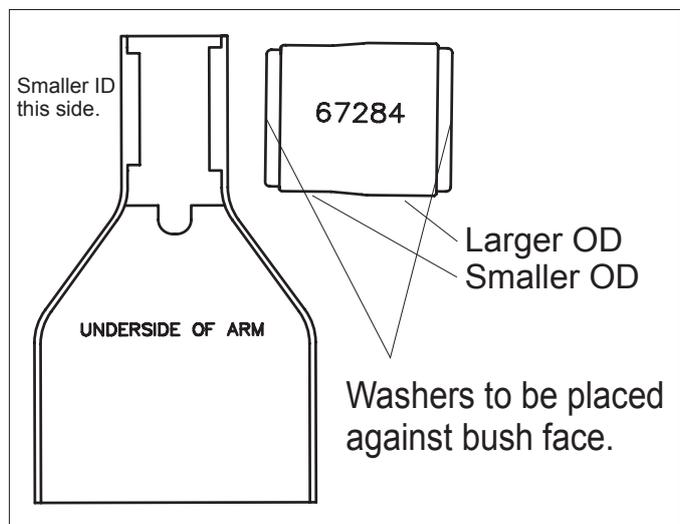

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.