



PARTS, SERVICE & ACCESSORIES

## AURION

March 2011 Production Onwards

### ACRYLIC HEADLAMP COVERS

#### Installation Instructions

Accessory Part No. PZQ14-33130

Installation Time: Approx. 15 mins

Place these instructions in vehicle's glove box after installation is complete

#### Care Instructions:



Do not slam bonnet.



Clean Headlamp Covers  
with a mild detergent and  
water solution.






Do not use automatic  
car wash.



Do not use abrasive,  
spirit or solvent  
based cleaners.


| Item | Component Name   | Qty                                  | Part number    |
|------|--|--------------------------------------|----------------|
| 1    | Headlamp Covers Set  | 1                                    | PZQ14-33130    |
| 2    | Metal Clips<br>Plastic Clips Inner Taped<br>Plastic Clips Outer<br>Abrasive Resistant Tapes<br>Washers<br>Screws<br>Alcohol Wipe<br>Fitting Instructions | 2<br>2<br>2<br>2<br>2<br>2<br>1<br>1 | PZQ14-33130-FK |

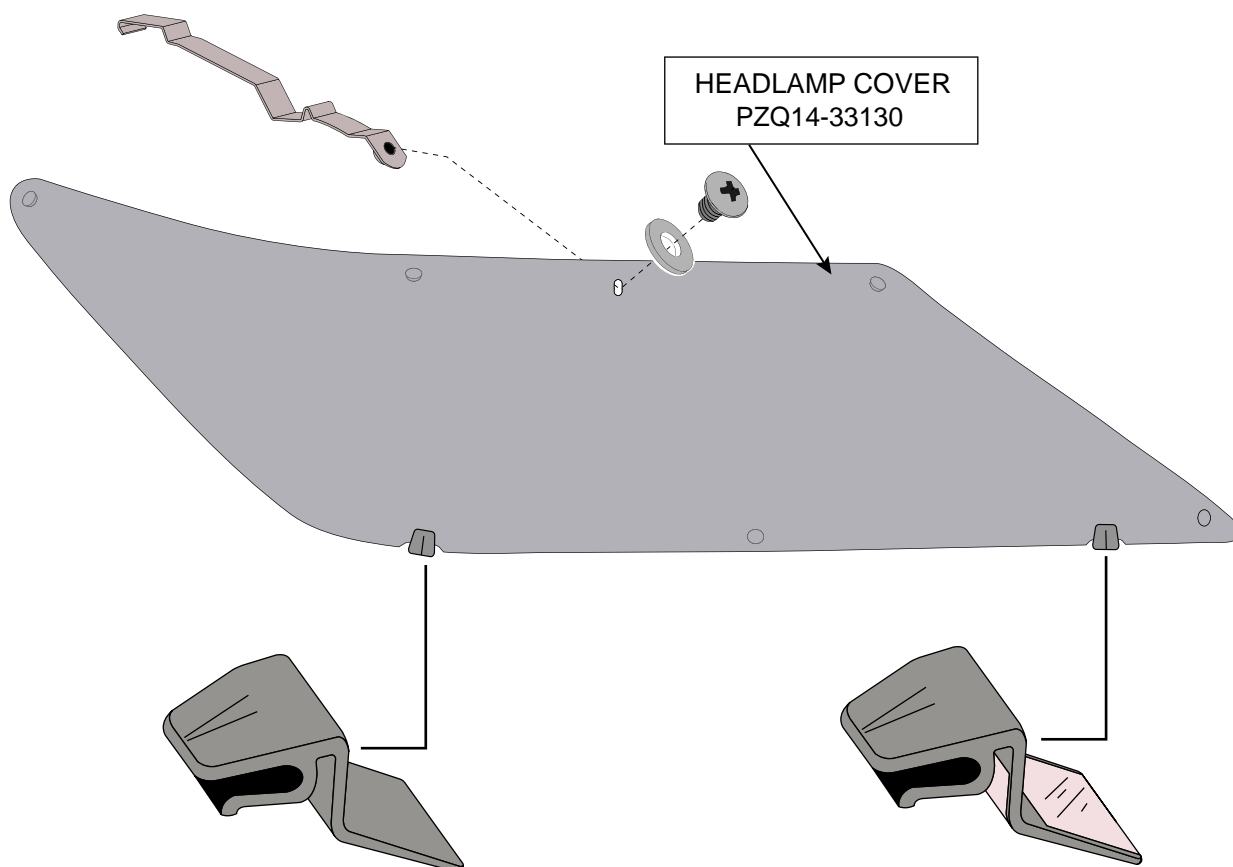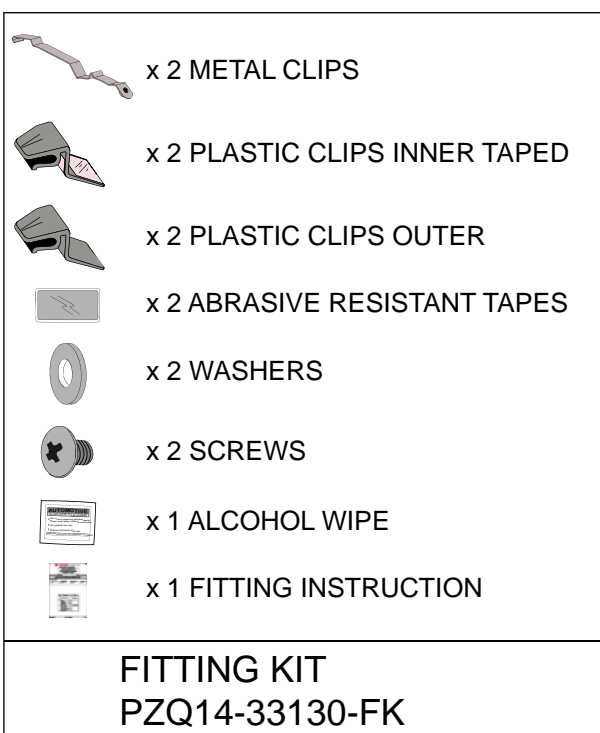

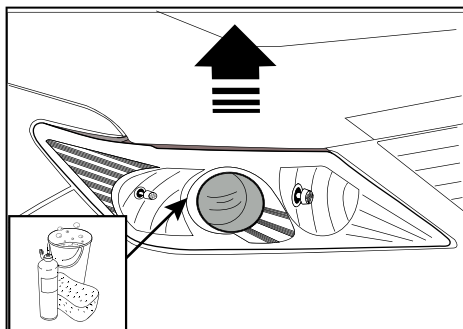


**Diagram #: 1**

1. Read installation instructions thoroughly before commencing installation. Open the bonnet and thoroughly clean and dry headlamps and surrounding areas. **See Dia #1.**

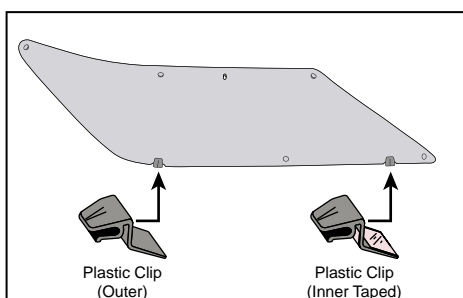

**Diagram #: 2**


2. Attach the plastic clips to the bottom of the Headlamp Cover as shown. You should hear a definite "click" when the clip engages with the slots in the Headlamp Cover. **See Dia #2.**

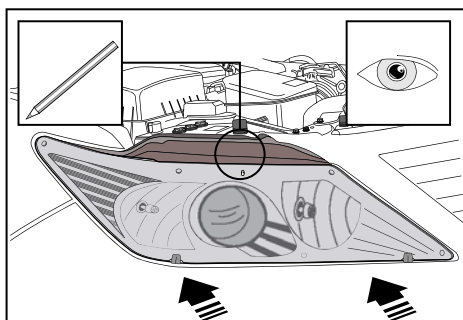

**Diagram #: 3**


3. Trial fit the Headlamp Cover centrally on the headlamp by carefully locating the plastic clips under the headlamp assembly. Note the slot in the top of the Headlamp Cover. Mark this location onto the headlamp assembly with a non-permanent marker. Remove the Headlamp Cover. **See Dia #3.**

**NOTE - LIGHT PRESSURE MAY BE REQUIRED TO FLEX THE BUMPER FASCIA DOWN TO ALLEVIATE THE TIGHT FIT.**

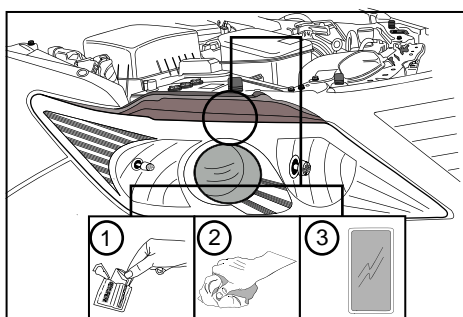


**Diagram #: 4**

4. At the previously noted and marked top slot position, clean the headlamp lens with the alcohol wipe provided. Remove any residue with a clean dry cloth. Adhere the abrasive resistant tape strip provided to the cleaned areas. **See Dia #4.**

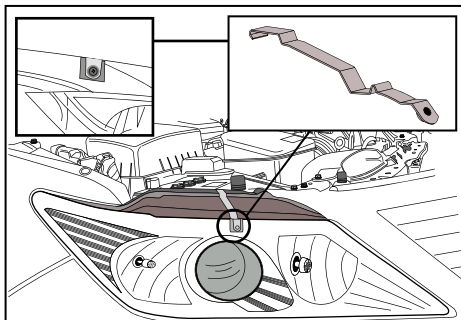


**Diagram #: 5**

5. Fit the metal clip to the top of headlamp at the previously noted position. Ensure that the metal clip is located on the abrasive resistant tape strip and not on the headlamp lens. **See Dia #5.**

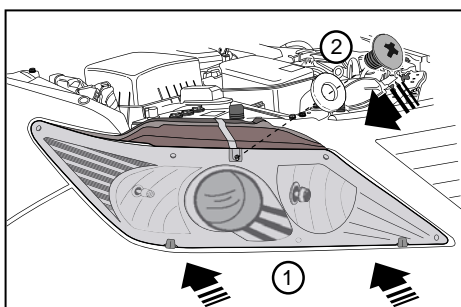

**Diagram #: 6**

6. To complete installation, insert the plastic clips between the bumper and headlamp assembly. Note: Light pressure may be required to flex the bumper fascia down to alleviate the tight fit. Position the top slot over the metal clip aligning the hole in the clip with the slot in Headlamp Cover, press down over the metal clip and at the same time apply upwards pressure to Headlamp Cover. Then secure the Headlamp Cover with screw and washer provided. **See Dia #6.**

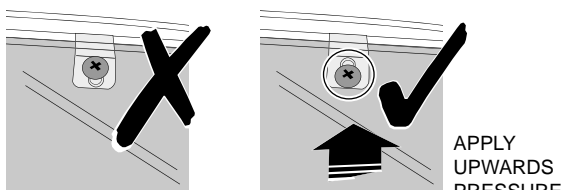

**IMPORTANT:** Note that screw is as close to **bottom** of vertical headlamp cover slot as possible.

**TO REMOVE:** Remove screws and washers, then remove the plastic clips on Headlamp Cover from the Headlamp assembly.