



TOYOTA

ALWAYS A
BETTER WAY

Toyota C-HR

Rear underguard

Installation instructions



Model year: 2016/10
Vehicle code: **X*O*-AH***W
Part number: PW415-10000

Manual reference number: AIM 003 847 - 0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted steps


PW415-10000

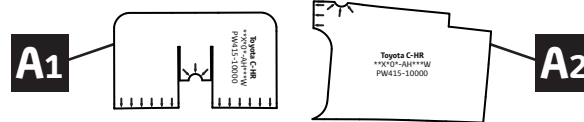

A


1x

PW415-10001




B

4x



C

4x



D

3x



E

4x



F

4x




G



2x









10 mm




Ø 3,5 mm
Ø 6 mm
Ø 9 mm

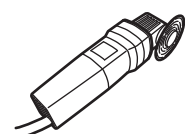

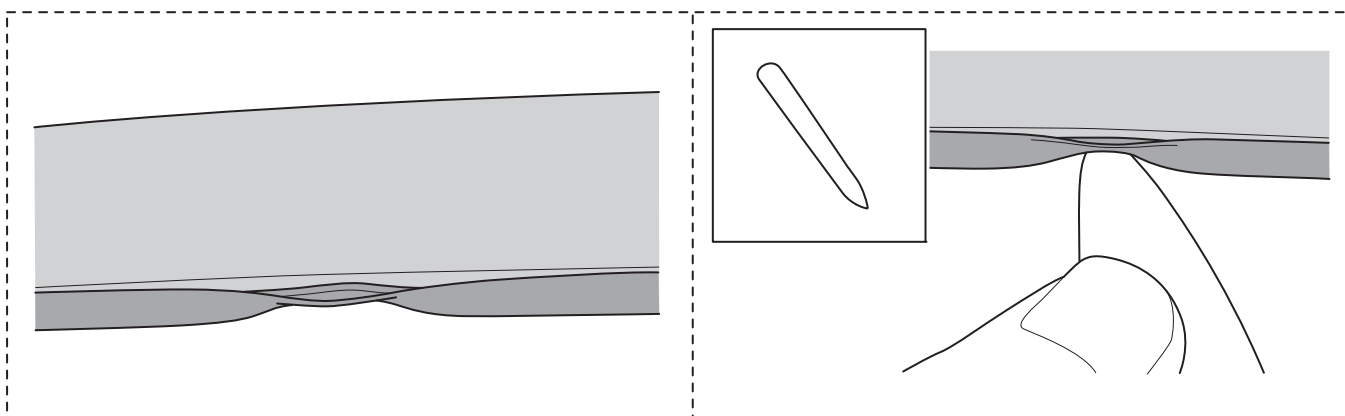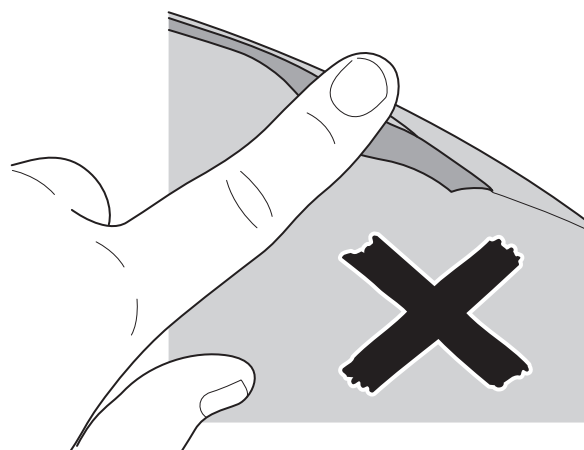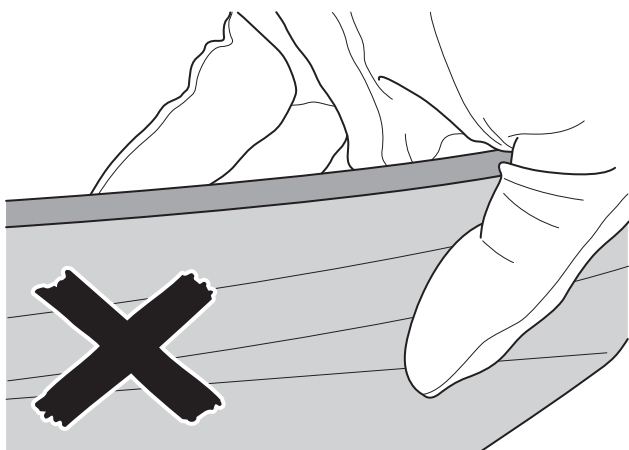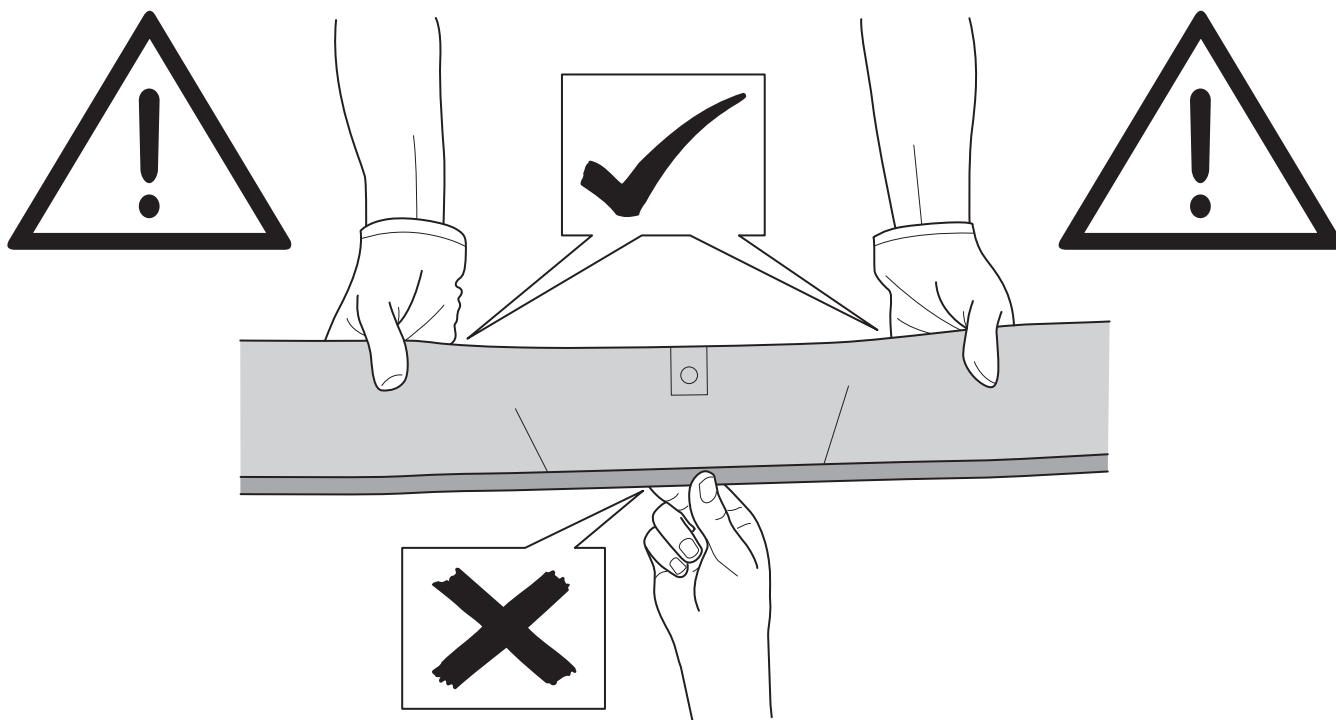


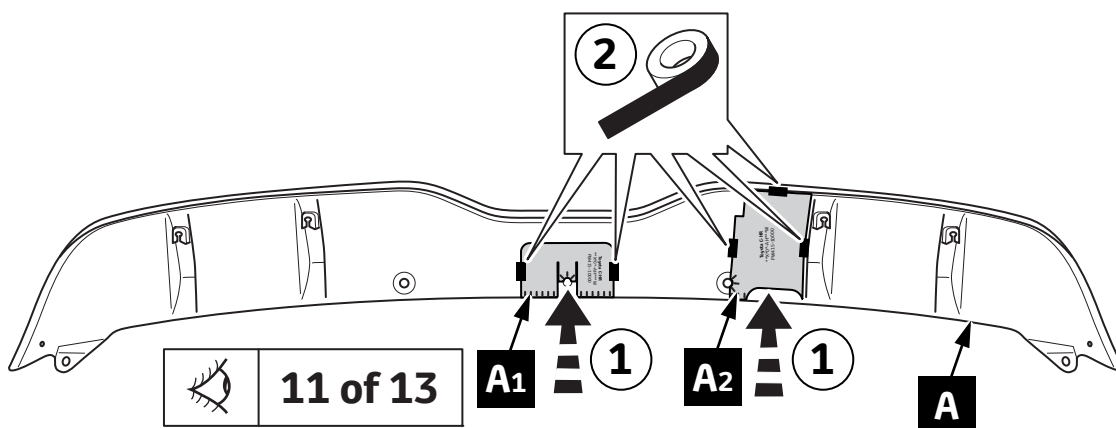


1

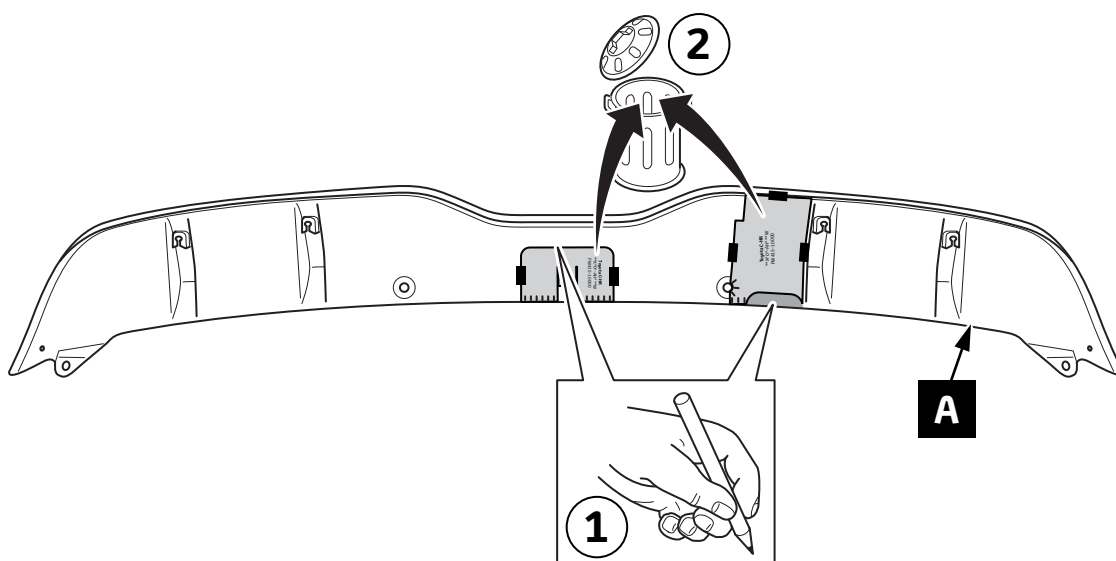


2

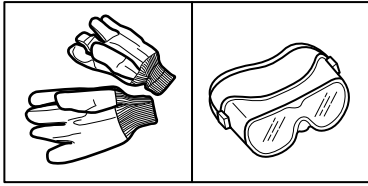

A

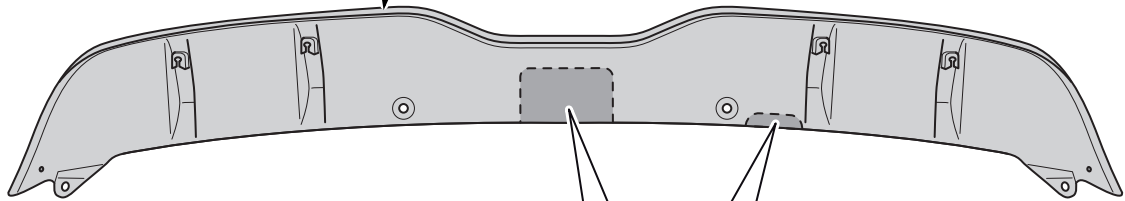


A

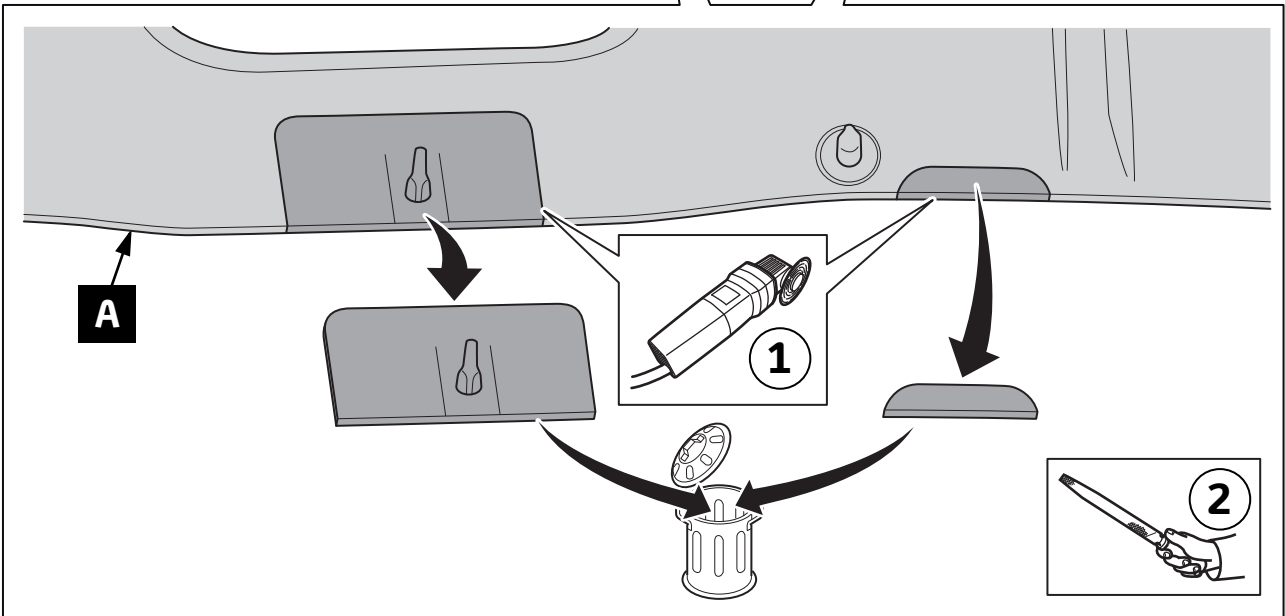


3


A

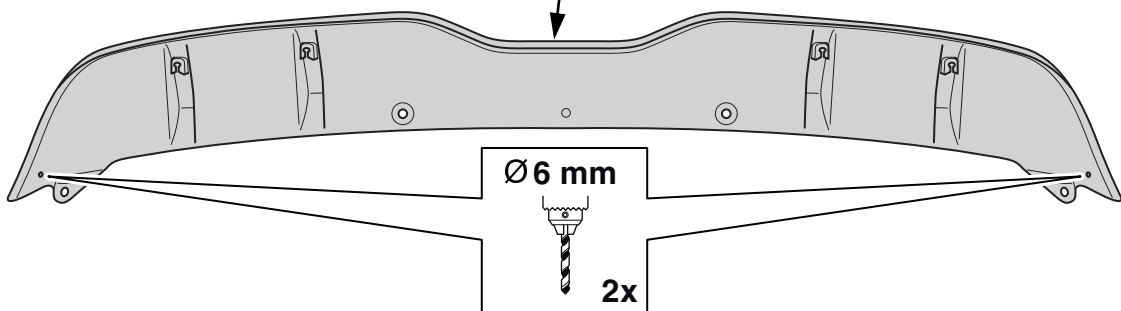


4

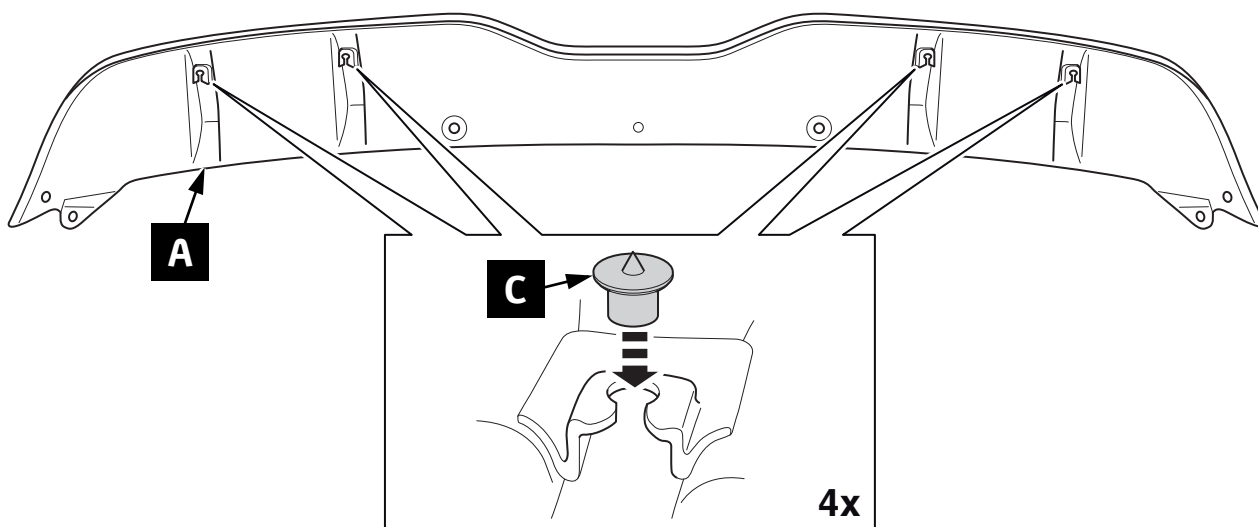


5

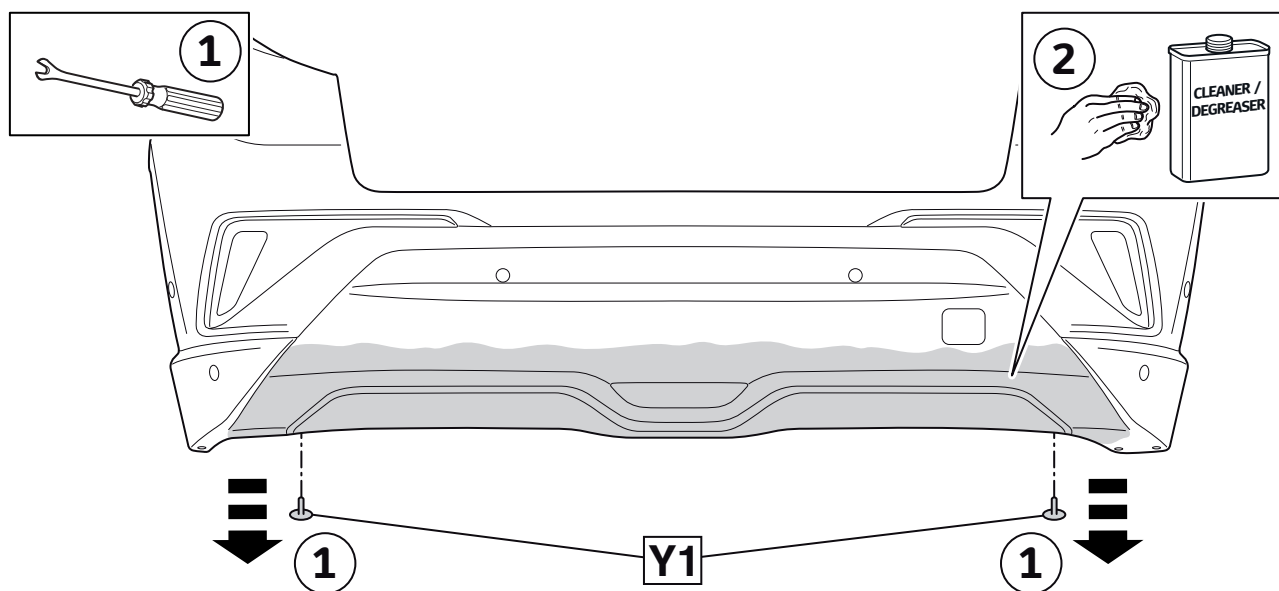


6

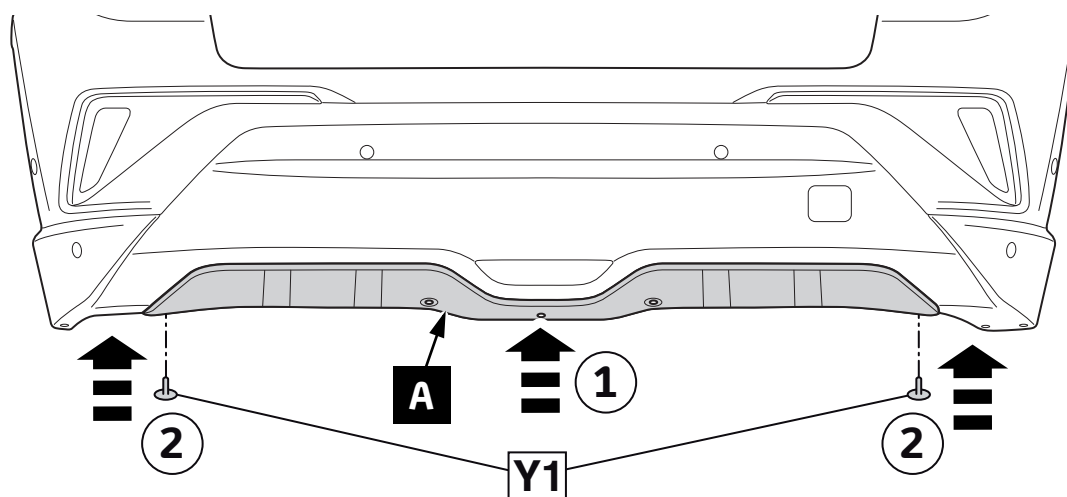


7

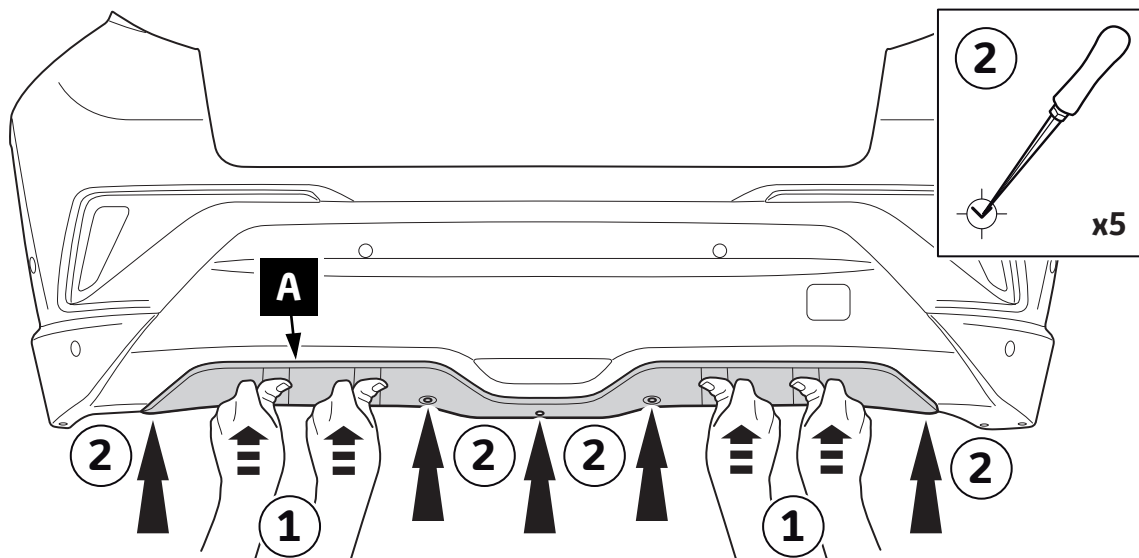




8

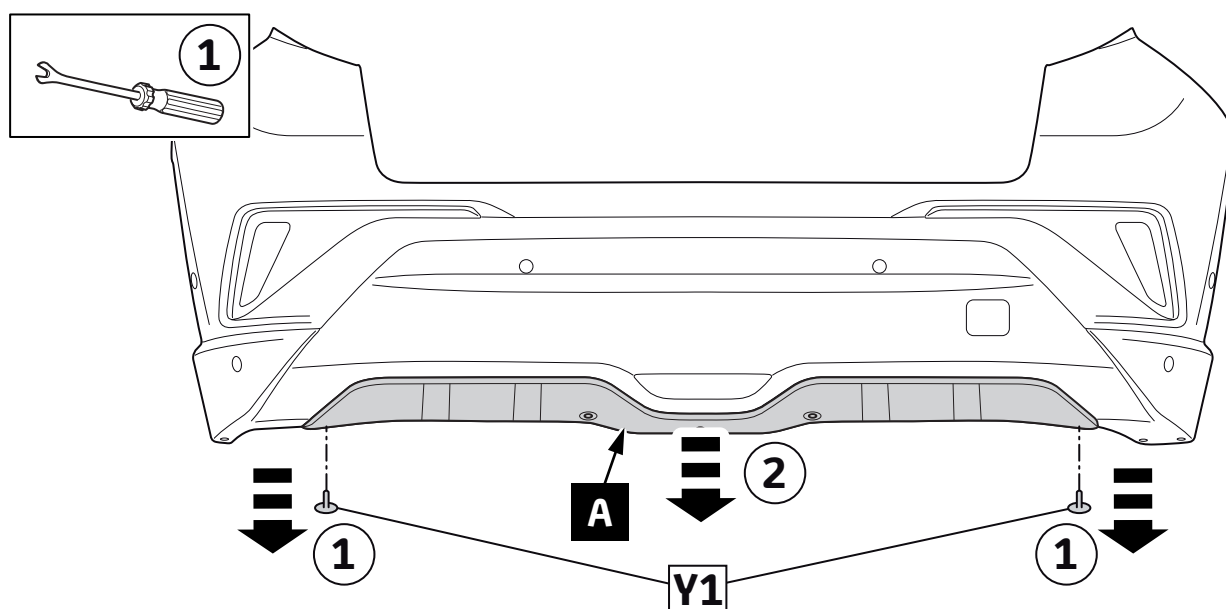




9

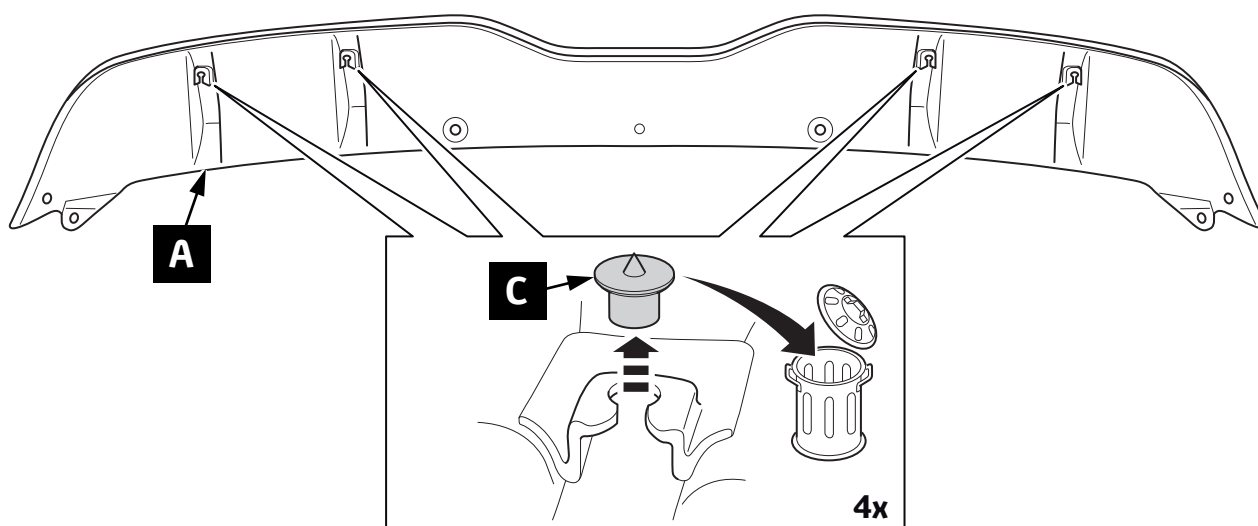




10

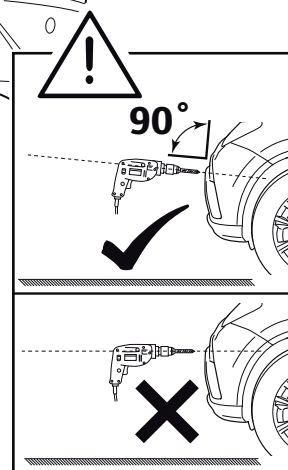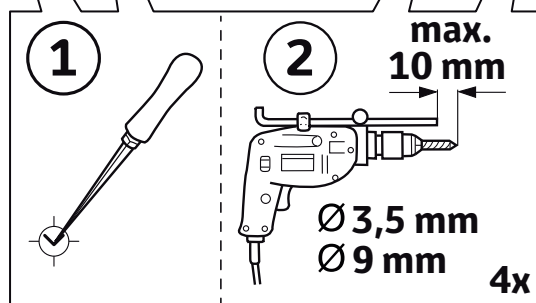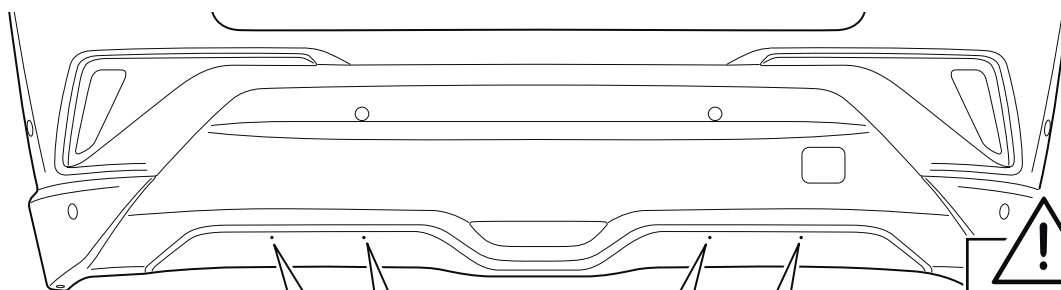

11

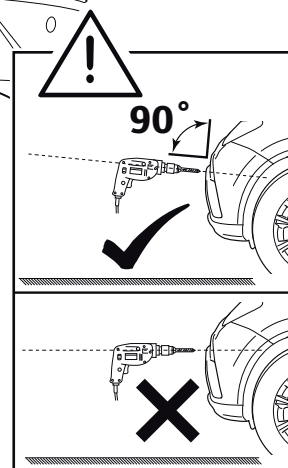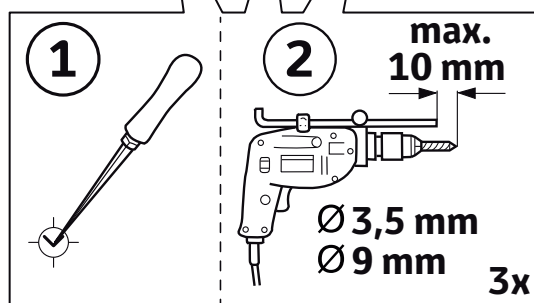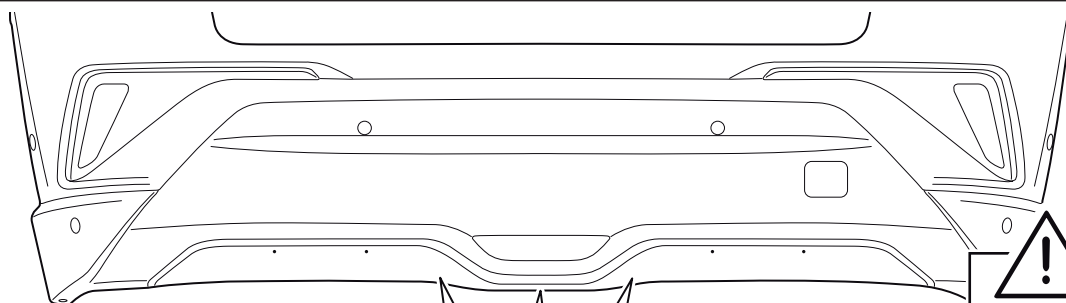


12

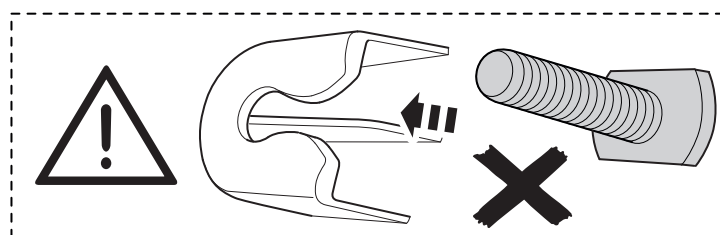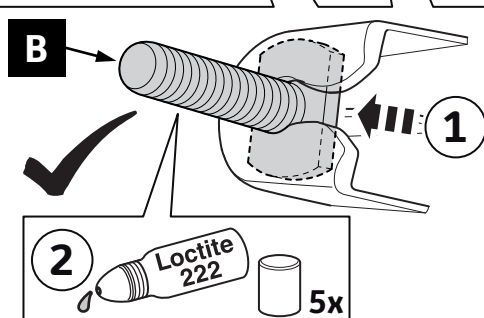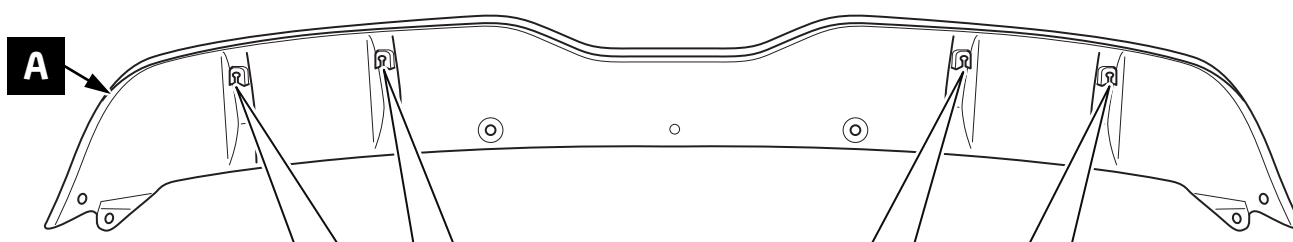


13

4x

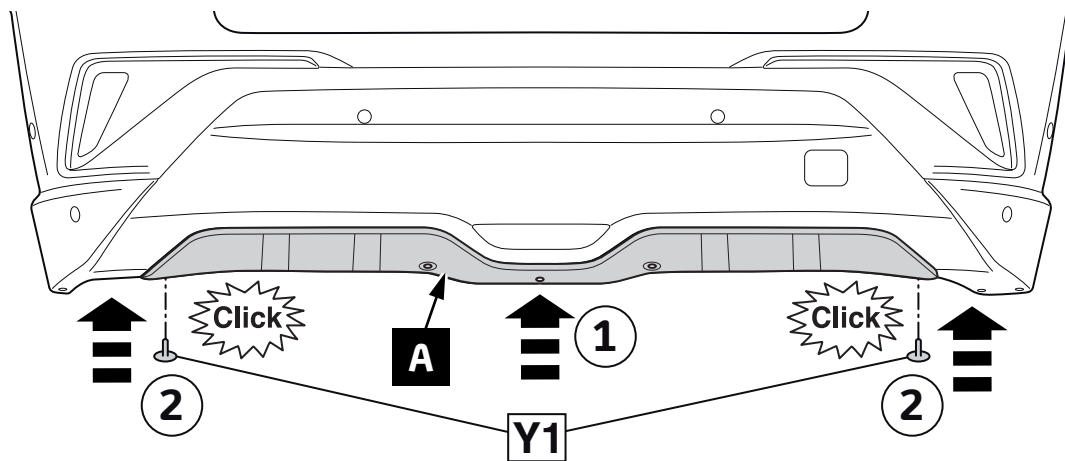

14

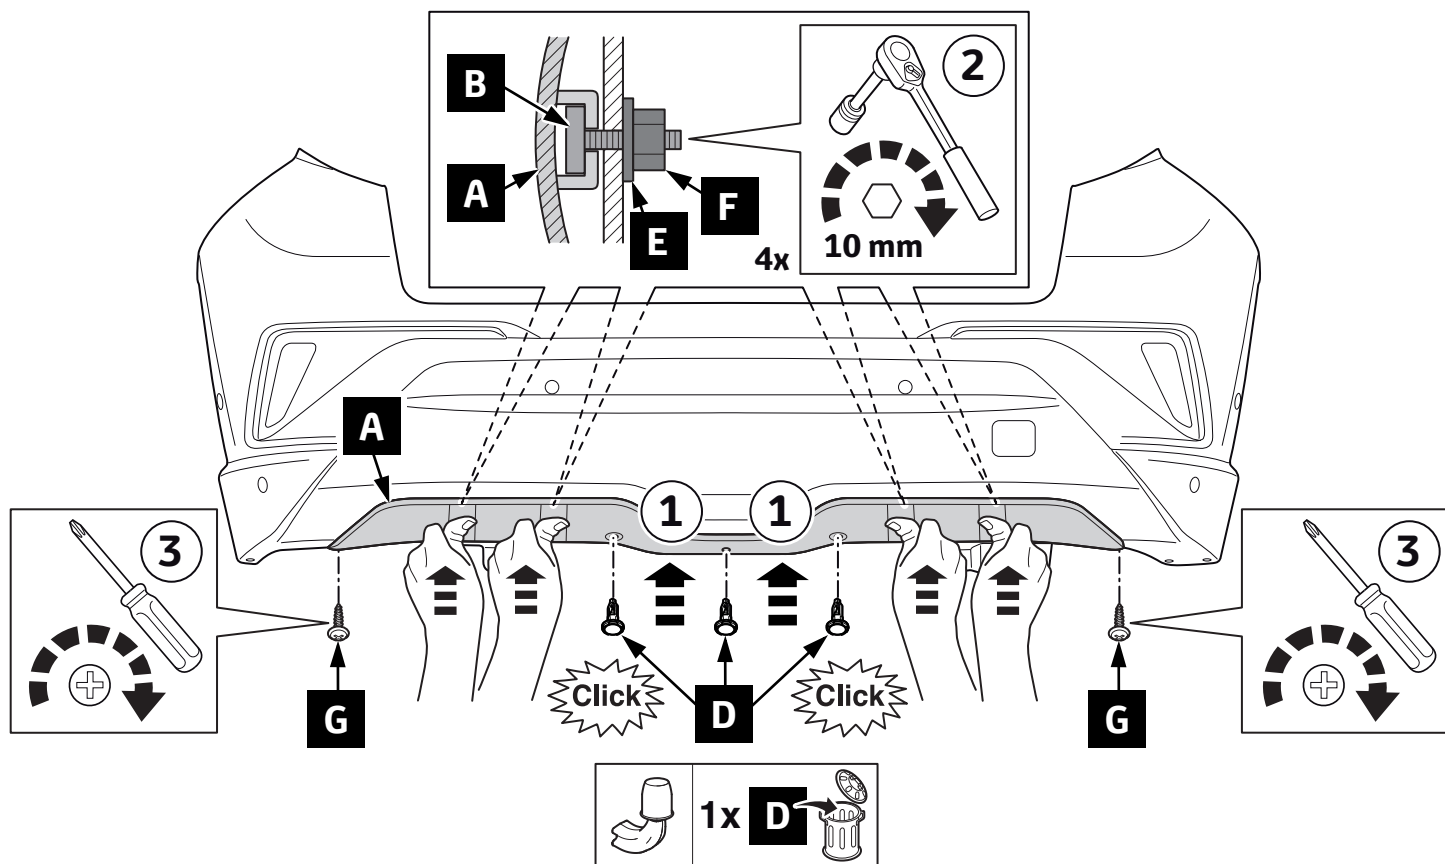

13

