

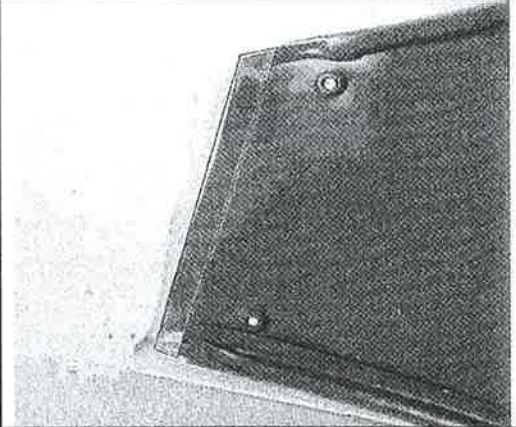

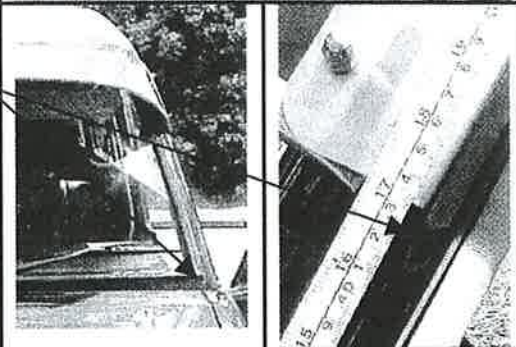




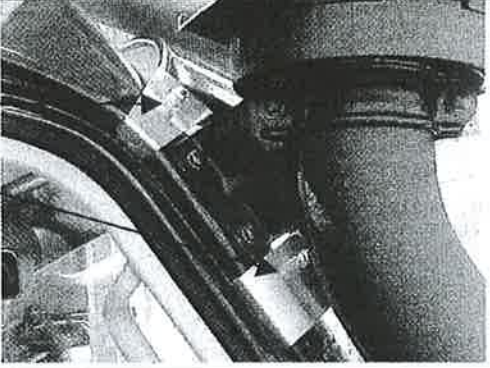


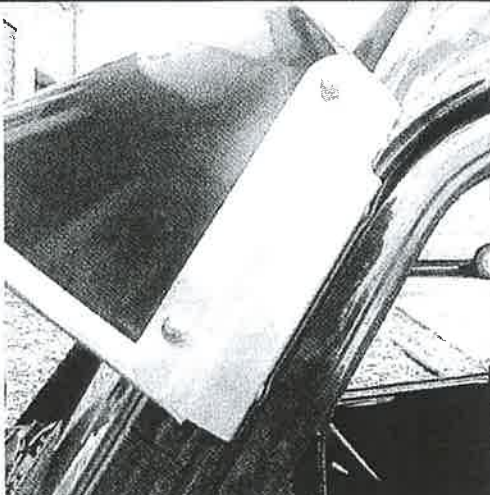
**Toyota Land Cruiser 78,79 series
(with snorkel) 8/99 production onwards
Sunvisor Part No# PZQ65 60020
FITTING INSTRUCTIONS**

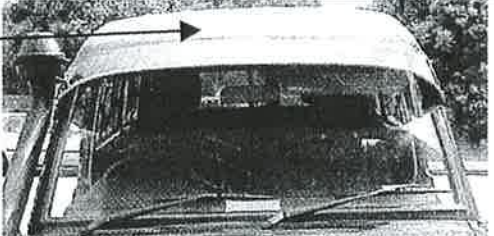
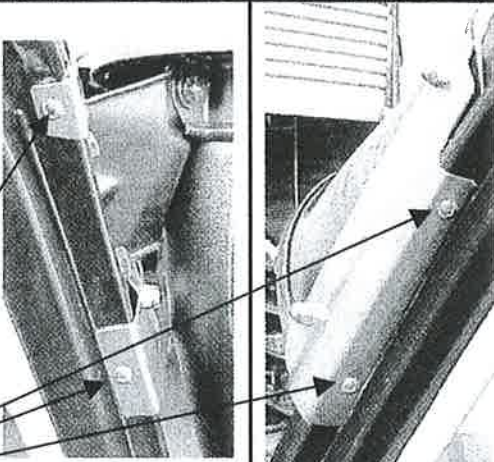
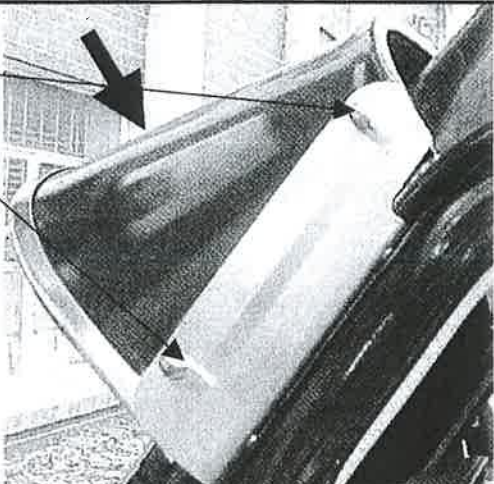


FITTING KIT	
1	Sunvisor Part no# PZQ65 60020
4	pk screws
1	Roll of anti-abrasion tape
3	Side brackets (attached to sunvisor)
4	Dome nuts, studs and S/S spring washers

⚠ **Two people are required for installation** ⚠

Step	Action	Outcome
1 <input type="checkbox"/>	Check all parts are present as outlined above (Fitting Kit) and remove and retain the side brackets, dome nuts, studs and S/S spring washers.	
2 <input type="checkbox"/>	Paint sunvisor to required colour. (Sunvisor supplied in acrylic undercoat) ⚠ Ensure painting process is compatible with acrylic undercoat	⌚ Wait for sunvisor to dry
3 <input type="checkbox"/>	Apply clear anti-abrasion tape supplied as shown to each end of the sunvisor. Ensure this tape is wrapped around the edge so that an equal amount is applied to top and bottom surfaces.	
4 <input type="checkbox"/>	Using felt tip pen or similar, mark a line approximately 430 mm up from bottom of gutter.  This mark is used to align the LOWER EDGE of the sunvisor. Note: Use a non permanent marker.	

Step	Action	Outcome
<p>5</p> <p><input type="checkbox"/></p>	<p>On the drivers side fit the sunvisor around the snorkel bracket and into the gutter as shown. Ensuring equal gap on either side of snorkel bracket.</p>	
<p>6</p> <p><input type="checkbox"/></p>	<p>Attach 2 smaller stainless steel brackets and spring washers and dome nuts as shown.</p> <p>Ensure that the larger bracket is on the lower stud of the sunvisor.</p> <p> Finger tighten dome nuts only</p>	
<p>7</p> <p><input type="checkbox"/></p>	<p>On the passenger side fit the sunvisor into the gutter as shown.</p> <p>Ensure lower edge of sunvisor is aligned with the mark made in Setp 4</p>	
<p>8</p> <p><input type="checkbox"/></p>	<p>Attach 1 large stainless steel bracket and spring washers and dome nuts as shown.</p> <p> Finger tighten dome nuts only</p>	

Step	Action	Outcome
9 <input type="checkbox"/>	Visually check that sunvisor is level. Adjust if necessary.	
10 <input type="checkbox"/>	Check that side brackets are positioned firmly against side pillar and drill two 3mm holes into A-pillar. ⚠ Remove all swarf then rust proof all holes with Techtyle or Zinc rich paint. Repeat on other side.	
11 <input type="checkbox"/>	Fit pk screws as shown ⚠ Do not overtighten pk screws.	
PASSENGER SIDE		
12 <input type="checkbox"/>	While pushing sunvisor towards gutter tighten dome nuts firmly.	
DRIVER SIDE		
13 <input type="checkbox"/>	While pushing sunvisor towards gutter tighten dome nuts firmly. 📖 Please retain these instructions in the glovebox of vehicle for future reference.	