

TOYOTA

KEEP THE FEELING!



PARTS, SERVICE & ACCESSORIES

Rav 4

Space Saver Spare

December 2012 Production Onwards

Cargo Mat - All weather rubber.

Fitting Instructions

Accessory Part No.: **PZQ20 42260**

Installation Time: **Approx. 5-15 min.**

Please install the cargo mat in accordance with the following instructions:

Step 1. Remove the Cargo Mat from the box and unroll it completely. To help the mat sit flat against the floor, loosely roll the mat in the opposite direction to the way it was rolled for shipment, then unroll it again.


Step 2. Note: If the mat is to be fitted to a Vehicle from 12/2012 - 09/2015 please trim along the marked areas. See Figure ① & ②.

Step 3. Fit mat into Cargo area of vehicle.

NOTE



Place Cargo Mat on a scrap piece of plywood or similar suitable surface for cutting.

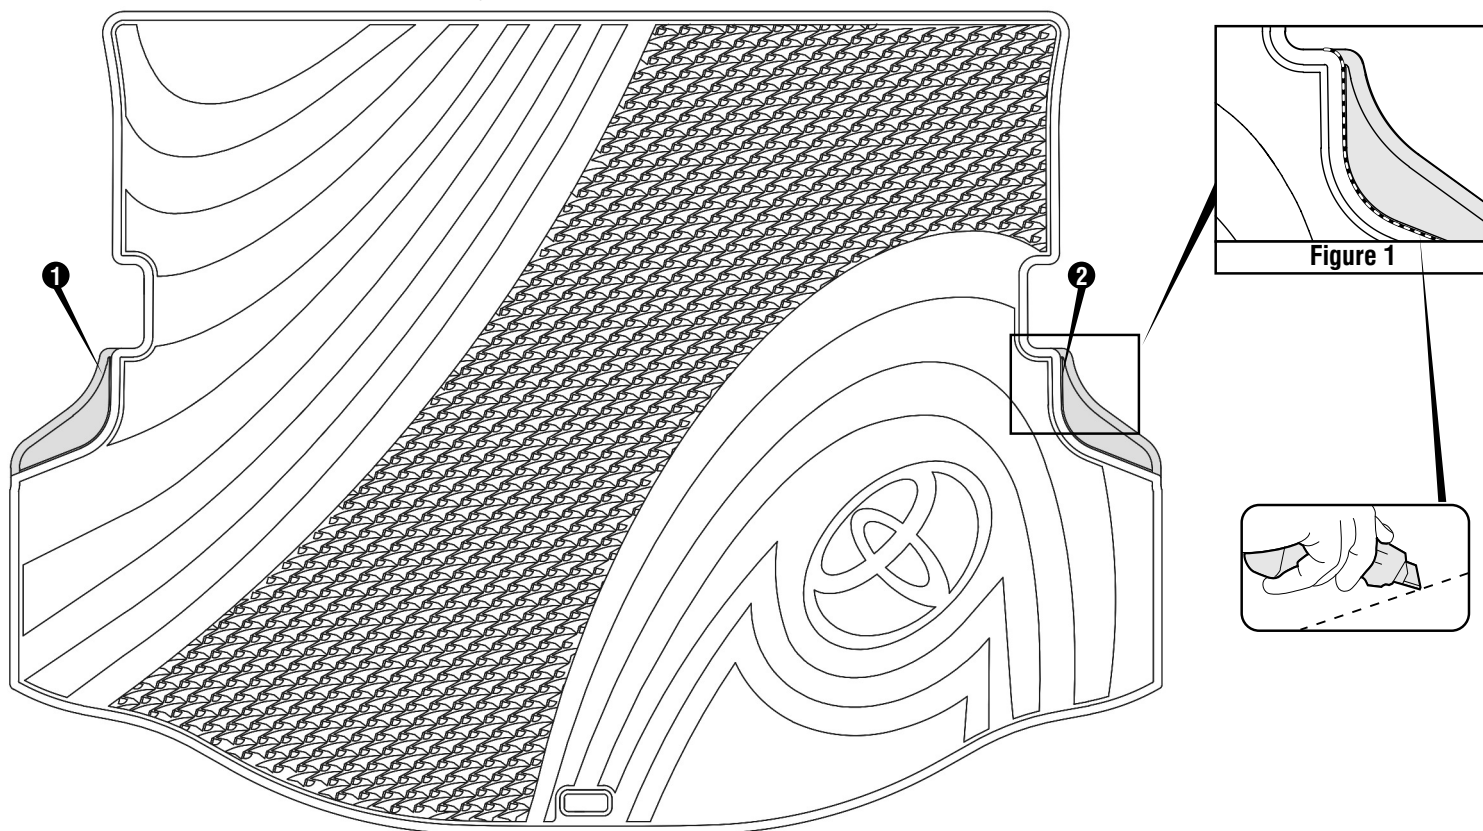

CAUTION



Take care when cutting the mat to ensure the knife blade is well away from fingers & hands etc. and securely embedded in the mat to prevent slippage that might result in personal injury.