

# Fitting Instructions

## Rear Sway Bar

Code: Z5165

Suits : Mitsubishi Colt 02 - on

1. Raise the vehicle evenly and support with jack stands.
2. Attach the swaybar ball links to the swaybar as per fig 1 and 2. Ensure the lower lock nut and Nyloc nut is tight.
3. Attach the swaybar to the vehicles suspension beam utilizing the supplied U bolts, saddles, plates and mounting bush. Ensure mounting bushes are generously greased. Refer fig 2 and 3.  
Note: It is recommended both U bolts be spread wide apart on the suspension beam.
4. Once you attach the swaybar to the beam, align the ball link studs with the lower spring saddle.  
Note: Ensure both large washers are used (one on the upper and lower side of the spring saddle). Then tighten upper lock nut with a spanner.

Fig 1.

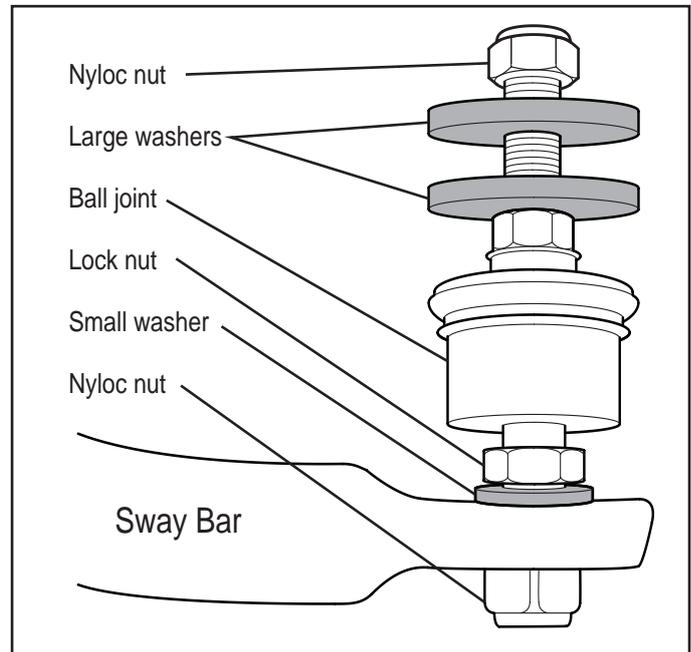


Fig 2.

Mounting bush, U bolt and saddle


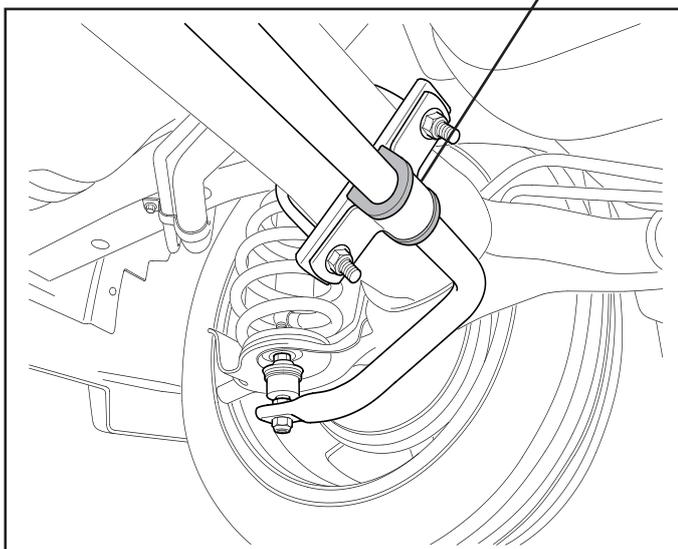


Fig 3.

Spring saddle Ball joint

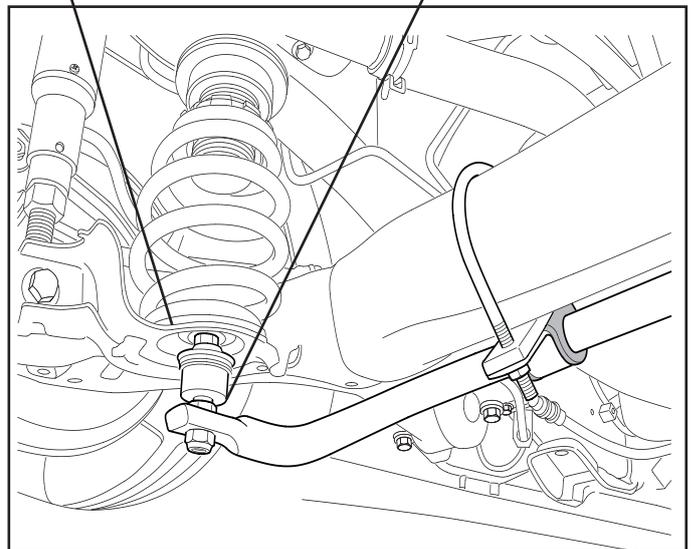

**Warning:** Please drive carefully while you accustom yourself to the changed vehicle behaviour.