

Fitting Instructions

Lower Torque Arm Insert

Code: Z5208

Application:


AUDI/VW MID 2008 - ON

CONTENTS:

1X INSERT
2X WASHERS
1X GREASE

INSTRUCTIONS

1. Remove the large bolt from the bush
2. Check that your bush is consistent with the shape of the later design in figure 1.
3. Slightly lubricate the bush for ease of fitment.
4. Insert the bush and push until base of insert is level with the OE bush.
5. Place the small washer inside the hole of the insert as per figure 3. This will control bush crush.
6. Place the large washer over the top and re fit OE bolt. Tighten bolt as per figure 4.
7. Road test vehicle, re torque bolt after initial 100km.

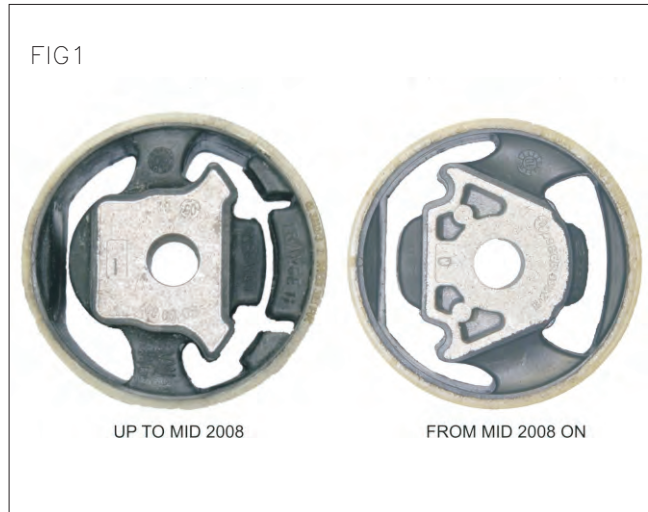

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.